


PIRANHA 25 TON PRESS BRAKE



Serial No. _____

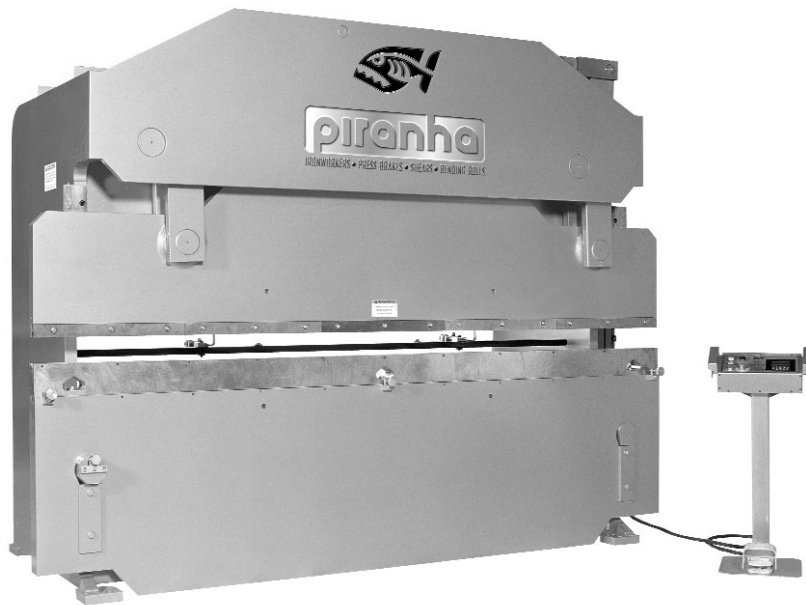

Instructions & Repair Parts Manual for Piranha 25 Ton Press Brake

No part of this manual may be stored in a retrieval system, transmitted, or reproduced in any way. Including, but not limited to photocopy, photograph, and magnetic or other record without the prior agreement and written permission of Mega Manufacturing, Inc.

PIRANHA ■ P.O. Box 457 ■ Hutchinson, Kansas 67504
Voice (800) 338-5471 ■ Fax (620) 662-1719 ■ www.piranhafab.com

Piranha
P.O. Box 457
Hutchinson, Ks 67504

Voice (800) 338-5471
Fax (316) 662-1719
Web Site www.piranhafab.com

No part of this manual may be stored in a retrieval system, transmitted, or, reproduced in any way. Including but not limited to photocopy, photograph, and magnetic or other record without the prior agreement and written permission of Mega Manufacturing Inc.

PN: T2924
25-4 GEN II Manual

Table of Contents

Safety	1
Warning Labels	2
Tooling Installation Safety	4
Safety Standards & Specifications	5
Introduction	6
Installation	7
Unpacking	7
Placement	8
Initial leveling	8
Cleaning	9
Precision Leveling.....	10
Electrical	11
Hydraulic.....	13
Filling the Pump Case	14
Motor Rotation	14
Operator Control	15
Pedestal controls.....	17
Key pad functions	17
Operating Parameters	19
Finishing Speed.....	19
Ram Return Modes	20
Setting Limits for Forming.....	28
Recalling a Job	29
Bed Leveling Adjustment	32
Tooling Installation	33
Press Brake Preparation	33
Die Insertion.....	33
Tooling Removal.....	34
Tool Adjustments	35
Tonnage Requirements.....	35
Die Rail Shimming.....	35
Maintenance Procedures	36
Maintenance Schedule	36
Gib Clearance Adjustment	37
Gib Adjustment	37
Side Thrust Gib Adjustment.....	37
Ram Slides	37
Hydraulic Power Unit	38
Oil Filter Replacement	38
Hydraulic, Electrical Diagrams & Components.....	39
Electrical Diagrams	39
Hydraulic Diagram.....	47
Parts.....	48
Ram Linkage	48
Valve Body Assembly.....	49
Hydraulic Valve Body Components	53
Hydraulic Power Unit Hoses & Fittings	54

Ram Slides	56
Oil Filter Assembly	57
Wedge Assembly	58
Die Rail Centering Screw Assembly.....	59
Punch Clamp Assembly	60
Backstop Assembly	61
Back Stop Finger Assembly	62
Die Rail	63
Index.....	70
Addendums	72

Table of Figures

Figure 1: Lifting Lug Location	7
Figure 2: Leveling Plate /Foot Detail.....	9
Figure 3: Precision Leveling Detail	10
Figure 4: Fuse Module Chart	11
Figure 5: Hydraulic Oil Warning Decal.....	13
Figure 6: Hydraulic Pump/Motor Assembly Unit.....	14
Figure 7: Main Electrical Enclosure	15
Figure 8: Bed Tilt Wedge Assembly.....	32
Figure 9: Die Rail Shimming Example.....	35
Figure 10: Gib Explanation.....	37
Figure 11: Oil Filter Assembly Exploded View	38
Figure 12: Electrical Diagram 1 of 4	39
Figure 13: Electrical Diagram 2 of 4	40
Figure 14: Electrical Diagram 3 of 4	41
Figure 15: Electrical Diagram 4 of 4	42
Figure 16: Hydraulic Diagram 1 of 1.....	47
Figure 17: Ram Linkage	48
Figure 18: Valve Body Assembly Top View.....	49
Figure 19: Valve Body Assembly Front View.....	50
Figure 20: Valve Body Assembly Rear View.....	50
Figure 21: Valve Body Assembly Left Side View.....	51
Figure 22: Valve Body Assembly Left Side View.....	52
Figure 23: Hydraulic Power Unit Hoses & Fittings.....	54
Figure 26: Gib Parts	56
Figure 27: Oil Filter Assembly Exploded View	57
Figure 28: Wedge Assembly.....	58
Figure 29: Die Rail Centering Screw Assembly	59
Figure 30: Punch Clamp Assembly	60
Figure 31: Back Gauge Assembly	61
Figure 32: Back Stop Finger Assembly	62
Figure 33: Die Rail.....	63

Safety

Safety must be a primary concern. When operating or performing maintenance procedures, follow all standard safety guidelines. Do not wear loose fitting clothing or any articles that may be pulled into any moving parts.

Be sure that when operating the equipment, all safety devices operate properly. Never under any circumstances disable, remove, or alter the original configuration of the safety system.

Should any component of the safety system become inoperable, immediately discontinue operation, and notify a supervisor.

- ! **NEVER** place fingers, hands, or any other body part in or under the ram area or other moving mechanisms.
- ! Proper eye protection must be worn at all times when operating the machine.
- ! Always insure that the machine is turned **OFF** before changing the tooling.

Read and understand this manual prior to operating the machine.

The area around the Piranha 25 Press Brake should be well lighted, dry, and free of obstacles.

The Piranha 25 Press Brake is designed for single person operation only.

Always insure that all tooling is properly secured in position before starting any operation.

When servicing the machine always practice standard lockout/tag-out procedures to avoid personal injury.

Qualified maintenance personnel only should perform service operations on the Piranha 25 Press Brake.

NOTE: The Run/Program keyswitch provides security for choosing initiation means and operation modes that can be supervised by the user, in accordance with ANSI B11.3 standards. The Generation II control system also provides a Footswitch Control Module. Removing the Footswitch Control Module can provide an extra level of lockout security for initiation means, if your plant safety program deems a level is needed beyond the Run/Program keyswitch. Without the Footswitch Control Module in place, Foot or Foot/Foot initiation means will not operate even if chosen using the Run/Program keyswitch.

When installing a Piranha “Plug -n- Play” light curtain assembly, the light curtain connector will replace the Footswitch Control Module.


Warning Labels

Located around the Piranha 25 Press Brake are labels warning the operator of various dangers and precautions to be aware of when operating or servicing the machine.




Place the depth limit dog to the top position or block the ram in the up position when the machine is stopped overnight to prevent damage to the micro switches. Do not use approach speed for pressing or machine damage may result.

Part – T0061

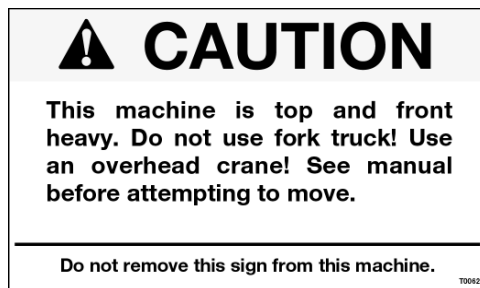

This machine is top and front heavy. Do not use a fork truck! Use an overhead crane! See manual before attempting to move.

Part – T0062

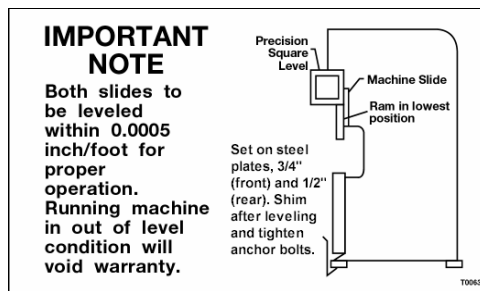

Both slides are to be leveled within 0.0005 inch/foot for proper operation. Running the machine out of level will cause damage and void the warranty.

Part – T0063




To prevent serious bodily injury;
Never place any part of your body under the ram or within the die area.

Never Operate, install dies, or maintain this machine without proper instruction and without first reading and understanding the operators or owners machine maintenance manual.

Never Install dies or service this machine with the motor "on" and control in "on" position.

Part – T0066

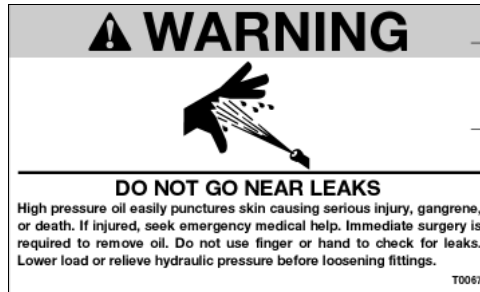

Do not go near leaks

High-pressure oil easily punctures skin causing injury, gangrene and even death. If injured, seek emergency medical help.


Immediate surgery is required to remove oil. Do not use finger or hand to check for leaks. Lower load or relieve pressure before loosening fittings.

Part – T0067



Keep hands and body parts clear of moving parts.

Part – T0068

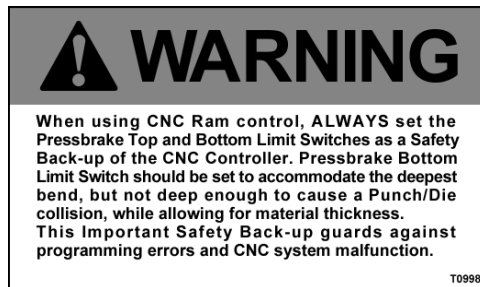

When using CNC Ram control, always set the press brake top and bottom limit switches as a safety back up of the CNC controller. Press brake bottom limit switch should be set to accommodate the deepest bend, but not enough to cause a punch die collision, while allowing for material thickness.

This important safety back up guards against programming errors and CNC system malfunction.

Part – T0998

Tooling Installation Safety

Tool setting is a very important job. Safety of the operator, press brake and the tooling is involved. To properly prepare for the job, the tool setter should have a good working knowledge of press brakes, tools and materials. The person should also have been instructed in the use of tool trucks and other handling equipment. The person must also understand the importance of proper tool adjustment.

Aside from the technical knowledge the setter must develop a sense of personal safety awareness. It is not only important that tools are correctly installed in the proper size of equipment; the task must be accomplished in an organized and safe manner to complete the job.

The following steps offer a precautionary guide in the development for safe tooling installation procedures.

1. Immediately report any questionable operation, unusual action, unsafe condition or improper maintenance to the proper personnel.
2. **NEVER** at any time allow fingers or hands to be between the tools.
3. When working with other people insure that all persons are clear of the press brake prior to any ram motion (jogging, inching or cycling).
4. Insure that the proper safe material handling equipment (tongs, pliers, vacuum lifters or other mechanical devices) available to the press brake operator.
5. When changing the settings of press brake controls, insure that the controls are properly adjusted and test cycle the machine to verify correct operation.
6. Any locking type of controls should be adjusted by authorized personal, and the key must be removed to a secure location when not being used.
7. Insure that all devices are in proper working order.
8. Anytime that the machine has been left unattended or inoperative for even a brief time, verify the correct position of all controls and proper press brake operation.
9. Develop a sense of safety for yourself and any persons around you as well as your surrounding area.

Safety Standards & Specifications

Electrical System Design/Manufacture:

The machines manufactured in Hutchinson, KS, are furnished with electrical/electronic products that are UL (Underwriter's Laboratory) approved. These components have the UL numbers printed or stamped on them and can be easily traced to the point of manufacture

Hydraulic System Design/Manufacture:

Hydraulic components used in Piranha machines are approved by NFPA (National Fluid Power Association), and those approval numbers can be traced through the manufacturer's part numbers.

ANSI/OSHA Compliance:

Mega Manufacturing meets the current ANSI construction standards for manufacturing of ironworkers, press brakes, and shears:

ANSI B11.3—Power press brakes, Construction, Care, and Use

The ANSI B11 standards were developed to establish levels of responsibility for manufacturing safe products, installation, training, and use of these products. The levels of responsibility are fairly evenly distributed between the manufacturer, the owner/end user of the equipment, and the operator. Specific guarding requirements are in general assigned to the owner/end user of the equipment.

Please understand that this ruling places the primary burden of responsibility for maintenance of guarding on the owner /end user of the equipment. Inherent in this requirement is the responsibility of the owner/end user of the equipment to develop and maintain guarding specific to their application for the equipment. These ANSI safety requirements may be acquired from:

**American National Standard Institute
1430 Broadway
New York, New York 10018
Telephone (212) 354-3300**

**PO Box 457
Hutchinson, KS 67504-0457
Phone: (800) 338-5471
Fax: (620) 669-8964**

Introduction

The Piranha press brake is a heavy duty, high performance hydraulic powered machine that provides several important advantages surpassing other press brakes in today's market. The Piranha's single hydraulic cylinder mechanical linkage system provides full tonnage at any point across the bed.

The machine is shipped fully assembled requiring only hydraulic oil and electric power to become fully operational. The heavy steel "C" frames interlocking cross members, ram and bed provide the integrity and resistance to deflection that is necessary for accurate performance. State of the art, maintenance free, aerospace fiber glide bushings provide high load capacity and low friction in the form of a thin walled sleeve. They are completely non-metallic and require no lubrication. Hardened micro-finished oversize link pins allow the linkage to withstand high load forming and punching applications.

Other standard features include: emergency stop button, Generation II control system, bed tilt adjustment, spring open die clamps with hardened clamping bolts. Hardened & ground ram slides with non-metallic ram gibs, PRS.

The precision model offers ram repeatability of +/- .0004" This machine is equipped with a Hurco CNC unit as standard. The Hurco CNC must be in use and the Finishing Speed function must be turned on to achieve +/- .0004" repeatability.

Warranty

Mega Mfg. will replace or repair with like parts, either new or rebuilt, F.O.B. the factory, or refund the purchase price for any parts on ironworkers, pressbrakes, or shears, which are defective in materials and workmanship within (12) months of the date of purchase. Provided the buyer returns the warranty registration within (30 days) of the purchase date, and, at the seller's option, returns the defective materials freight and delivery prepaid to the seller, which shall be the buyer's sole remedy for the defective materials. A 5-year warranty against defects in materials and workmanship applies to major structural components on pressbrakes and shears. Seller shall not be liable to purchaser or any other person for consequential or incidental damages. Hydraulic and electrical components are subject to their respective manufacturer's warranties. This warranty does not apply to machines and/or components which have been altered in any way, or subjected to abusive or abnormal use, inadequate maintenance and lubrication, or to use beyond seller recommended capacities and specifications. Seller shall not be liable under any circumstances for labor costs expended on such goods or consequential damages. Seller shall not be liable to purchaser or any other person for loss or damage directly or indirectly arising from the use of the goods or any other cause. No employee, agent, officer, or seller is authorized to make oral representations or warranty of fitness or to waive any of the foregoing terms of sale and none shall be binding on the seller.

Installation

BEFORE INSTALLING THIS PRESS BRAKE, READ AND UNDERSTAND THE PRESS BRAKE MANUAL WITH PARTICULAR ATTENTION TO “SAFETY TIPS FOR MAINTENANCE PERSONNEL” THE CURRENT ANSI B11-3 STANDARD-“SAFETY REQUIREMENTS FOR THE CONSTRUCTION, CARE AND USE OF POWER PRESS BRAKES.” Copies can be ordered from: American National Standards Institute, 1430 Broadway, New York, New York 10018

Unpacking

CAUTION: THE PRESS BRAKE IS HEAVY IN FRONT. GUARD AGAINST TIPPING UNTIL ANCHOR BOLTS ARE SECURED.

This machine was carefully packaged at the factory to avoid damage during shipment, should any accidental damage occur contact the responsible freight company immediately and report the damage. Indicate any damage on the Bill of Lading. All Warranty information included in this packet must be returned to the factory.

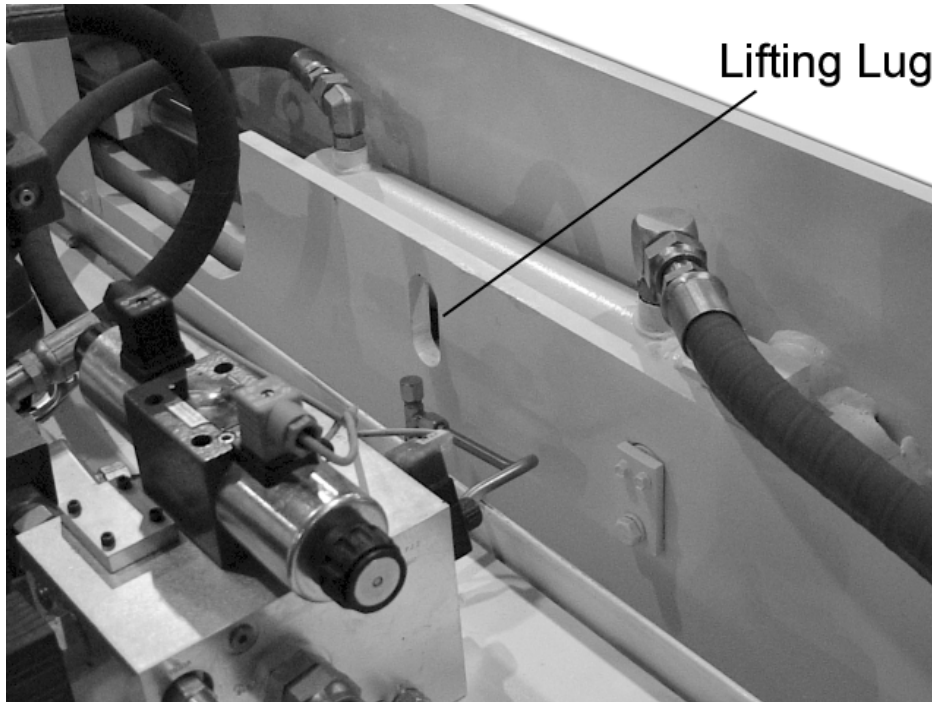


Figure 1: Lifting Lug Location

The Piranha 25 Press Brake must only be lifted using a crane, and the lifting lugs located in front of the hydraulic oil tank on top of the machine. **Do not** lift the machine from the bottom (forklift or jack) as the machine is top and front heavy and can tip resulting in serious bodily harm or death. Lifting the machine from the bottom can also result in machine damage.

Placement

Piranha recommends that the machine be placed on a reasonably level concrete foundation suitable to support the press brake's total weight and in accordance with local building codes. The machine should be placed on a single concrete pad free of cracks and seams. Prior to anchoring or setting, the press brake should be leveled and shimmed. **Anchoring** can be accomplished using suitable masonry anchors. Typically, only the rear feet of the machine need to be anchored. Use the machine as a template for anchoring hole locations. Placement of the machine should allow easy access around the machine for the operator and maintenance personnel. For safe operation placement should allow tooling to be installed onto the bed from the end of the machine.

It is recommended that a minimum four-foot area around the Piranha 25 Press Brake be provided.

Initial leveling

CAUTION: THE PRESS BRAKE IS HEAVY IN FRONT. GUARD AGAINST TIPPING BEFORE AND DURING LEVELING.

With Mobile Base

If the press brake is equipped with a Mobile Base (Part Number T2934), no additional leveling procedure needs to be followed. Stabilizing the base, due to uneven floor conditions is recommended. Simply adjust the leveling screws located at the rear of the base assembly.

Without Mobile Base

Level adjusting screws are only provided on the rear feet. The Piranha 25 Press Brake must be placed on four steel pads: 2 each 6" x 6" x $\frac{3}{4}$ " for the front feet and 2 each 6" x 6" x $\frac{1}{2}$ " for the rear feet. These pads are provided with the press brake.

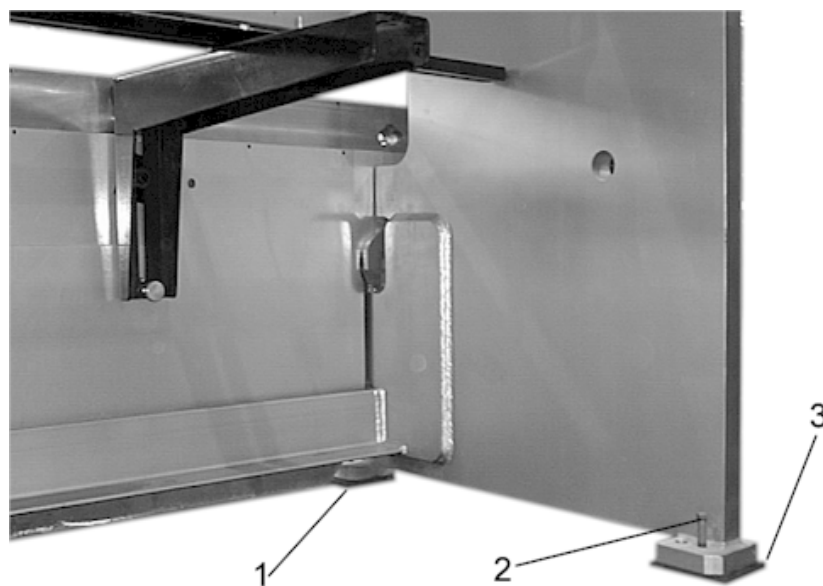


Figure 2: Leveling Plate /Foot Detail

1. Position the 3/4" thick pad under each of the front feet (*see Figure 2 Item 1*).
2. Position the 1/2" thick pad under each of the rear feet (*see Figure 2 Item 3*).
3. Before the riggers disconnect the lifting apparatus, check the press brake for rough level from the left to right plane.
4. Using a machinist square level, shim the front feet until the machined bottom surface of the **Ram** is level left to right. Desired level is within .005"-.015" inch per foot. A jack angle is located on the inside of the right C-frame to assist in leveling the machine right to left. Because of bed tilt feature, the bed cannot easily be used for leveling.

Cleaning

Clean the die rail, bed surface, punch holder pocket and die clamps with a mild solvent so as not to damage the paint finish on the machine. The main cylinder rod must also be free of contaminants. Any contaminants left on the cylinder rod may damage the chrome finish and related hydraulic seals. The cylinder rod must be clean and dry. Wipe down the rest of the press brake with a mild cleaning solution.

Precision Leveling

The Piranha 25 Press Brake must be leveled precisely prior to operation. The following steps represent the typical leveling procedure. These instructions must be followed to avoid damaging the machine.

This procedure will require that the press brake have electrical power connected and hydraulic fluid installed. The press brake must be functional enough to lower the ram to the bottom stop position.

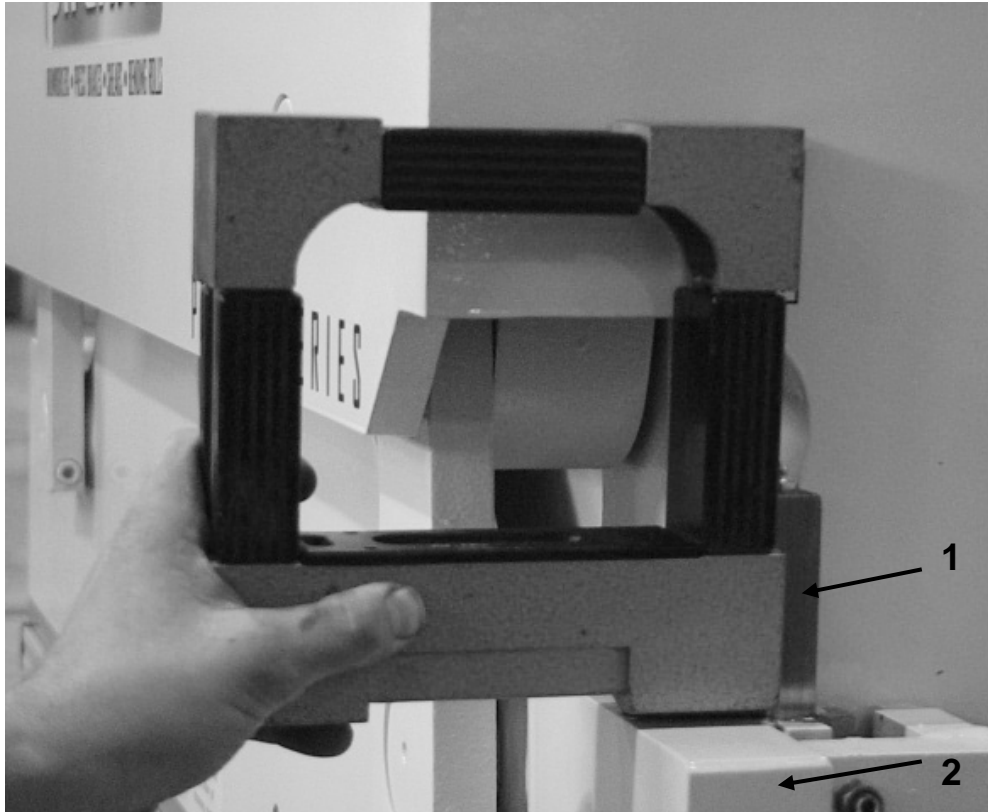


Figure 3: Precision Leveling Detail

Item	Description
1	Slides
2	Ram

Table 1: Ram Slide Location Explanations

1. Before beginning the leveling procedure, turn on the press brake and lower the ram to the bottom of stroke position, then turn the press brake off.
2. It is important to keep in mind that the left and right side need only to be parallel with each other, rather than perpendicular with the floor.
3. Using a machinist square level having an accuracy of .0005" inch per foot graduation, place the level firmly against the front face of the right vertical ram slide as shown. (See Figure 3 Item1)

4. Adjust the rear-leveling bolt until the bubble on the level is centered.
5. Repeat this procedure for the left slide. Adjust leveling bolts as required.
6. The side frames must be parallel to each other within .0005" per foot.
7. Once the machine is level, place shims, having a thickness equal to the gap between the base plate and the bottom of the press brake foot under the foot.
8. After the shims are in place, lower the adjusting bolts and re-check the level to ensure that the left and right sides of the machine have remained parallel to each other. The overall shim pack height may need to be adjusted in order to maintain side frame parallelism.
9. The machine may now be anchored to the floor using concrete anchor lugs.
10. After tightening the floor anchor lugs, re-check the press brake level to ensure that the machine has not moved.

Electrical

CAUTION: ELECTRICIANS CHECKING DIRECTION OF ROTATION SHOULD BE CAUTIONED NOT TO OPERATE THE PRESS BRAKE UNTIL IT HAS BEEN THOROUGHLY CHECKED, CLEANED, LEVELED AND LUBRICATED. A WIRING DIAGRAM IS FURNISHED IN THIS MANUAL. PRESS BRAKE OPERATING MODE MUST BE IN THE OFF POSITION WHEN CHECKING MOTOR ROTATION.

BEFORE DRILLING ANY HOLES IN THE ELECTRICAL ENCLOSURE, BE SURE THAT THE ELECTRONIC CIRCUIT BOARDS/EQUIPMENT ARE PROTECTED FROM METAL CHIPS CONTACTING THE CIRCUIT BOARD(S). DO NOT USE COMPRESSED AIR TO BLOW METAL DEBRIS FROM THE ENCLOSURE. USE A VACUUM TO REMOVE ANY METAL PARTICLES.

The complete Motor Module must be replaced if the machine voltage is changed.

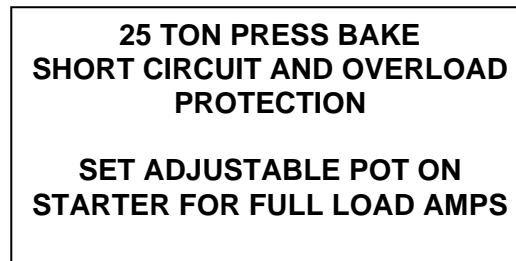


Figure 4: Fuse Module Chart

Electrical connection of the 3-phase systems requires proper phasing. When connecting the press to a 3-phase power source, the rotational direction of the pump drive motor must be correct. The rotational direction of the motor may be observed by viewing the fan through the end cover of the motor and the corresponding arrow on the electrical motor (*see Figure 6*).

A licensed electrician should perform all electrical connections.

! **Warning** - The control transformer is for machine operation only. Do not use the machine transformer to power any secondary devices.

If the CNC back-gauge is installed on the machine, a dedicated 115-VAC, 60Hz, 20-Amp fused service must be provided.

Connecting the Pedestal Control

Prior to operation, the pedestal control plug must be connected to the main control panel. To connect the plug, locate the receptacle on the bottom of the main electrical control box. Align the plug with the receptacle. Insert the plug and rotate the outer ring securing the plug to the receptacle.

Hydraulic

Before applying power to the Piranha 25 Press Brake, the hydraulic reservoir must be filled with oil. To fill the reservoir, locate and remove the filler/breather cap on top of the reservoir. Fill the reservoir with Mobil DTE-13 or ISO32 equivalent, filtered to an ISO 17/15/13-cleanliness level. The oil level should be 2” below the top of the reservoir. Do not over fill the reservoir as overflow can occur. Replace the filler/breather cap. Adhere to the warning decal below.

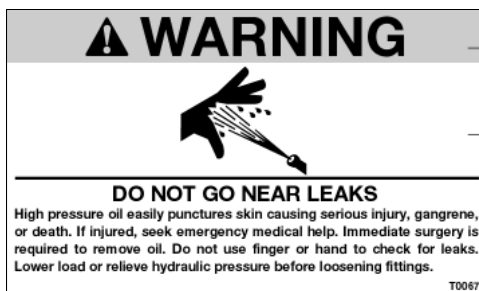


Figure 5: Hydraulic Oil Warning Decal

Filling the Pump Case

Prior to starting the motor for the first time, remove the pump case drain tube from the hydraulic pump and fill the pump case with hydraulic fluid. Reconnect the pump case drain tube. If the motor run in the reversed rotation, this procedure must be repeated. The pump case must be filled with hydraulic fluid upon start up.

WARNING: Failure to follow this procedure may lead to pump damage or premature pump failure.

Motor Rotation

Motor rotation can be verified by quickly “Bump Starting” the motor (starting and stopping quickly) and viewing the fan blade rotation through the fan blade shroud. The rotation direction of the motor fan blades must correspond with the direction arrow on the motor.

If the fan blades are obscured, use a flashlight to view the fan blades from the grease zerk slot on the fan shroud. Shine the light towards the fan blades and view the fan blade rotation.

Upon initial start-up of the hydraulic unit visually inspect around the machine for any possible leaks. Do not search for hydraulic oil leaks using exposed flesh, hydraulic pressure can puncture the skin.



Figure 6: Hydraulic Pump/Motor Assembly Unit

Item	Description
1	Direction of Rotation Arrow
2	Pump Case Drain Tube

Table 2: Hydraulic Pump/Motor Assembly Descriptions

Operator Control

Operator selectable controls are provided on the Pedestal Control Unit and on the Right Hand Side of the press brake. Functionality of the controls is described below.



Figure 7: Main Electrical Enclosure

Item	Description
1	Safety Disconnect Switch
2	Ram Safety Switch
3	Footswitch Control Module

If a CNC back-gauge is installed on the machine, a dedicated 115-VAC, 60Hz, 20-Amp fused service must be provided for the backgauge system

The **Ram Safety Switch** must be adjusted to engage within ½” above the speed change point to enable proper operation of the sequence modes and optional safety devices.



Fig. 8: Generation II Pedestal Control Unit



Item	Description
1	Keyed Program /Run Selector Switch
2	Ram Up Button
3	Teach/Learn Indicator Light
4	Motor Start Button
5	Motor Stop Button
6	LCD/ Keypad Unit

Pedestal controls

Start button: Depressing the green Start pushbutton will apply power to the electric motor that drives the Piranha Press Brake hydraulic power unit. Depressing the E-Stop pushbutton will remove power from the pump unit. Before attempting to start the hydraulic motor insure that the E-Stop control is in the armed (up) position.

Stop Button: The E-Stop (Emergency Stop) control is a red, two-position maintained push button. Pressing the E-Stop button will remove electrical power from the hydraulic power unit drive motor and all base machine control circuits, stopping all machine movement. Twist the button head clockwise to reset the pushbutton.

Machine movement **cannot** resume until the E-Stop button has been reset.

Ram up Button: Depressing the Ram Up button will raise the ram from any position to the up stroke position.

Program/Run keyed switch: Supervisor key switch to limit access to programming functions, run modes, and initiation means. In the Run position it allows operation of the press brake. In the program position, it enables programming functions, run mode access, and initiation means access.

Dual palm Buttons: Depressing the palm buttons simultaneously will initiate a press cycle. If either palm button is released before the ram reaches the full down position, the ram will respond according to the Run mode selector switch setting.

Footswitch: A footswitch is provided for use according to the initiating means. If the footswitch is released before the ram reaches the full down position the ram will react according to the Run mode selector switch setting.

Key pad functions

Alpha/numeric keys: Contains numeric and alpha characters used for data entries. Programs similar to a cell phone format.

Hand/Foot: Permits the operator to toggle between the various initiation means when Program/Run switch is in the Program position.

Mode: Permits the operator to toggle between the various run modes when Program/Run switch is in the Program position.

⬆ / **Yes:** Moves the cursor up and answers yes to questions requiring a positive response

⬇ / **No:** Moves the cursor down and answers no to questions requiring a negative response

Bksp: Moves the cursor backward one position per depression.

Esc: Moves display back to the previous menu

Decimal: Inserts a decimal point.

Job/Learn: Will display a job selection menu, and inputs value during teach mode. *When in the run screen, depressing the job/learn key will display the job selection menu. In the teach mode, depressing the job/learn key will input the current ram position.*

Clr: Clears most recent entry.

Enter: Confirms data entry.

Cycle counters & Timers

Machine counter: Master cycle counter, tracks total number of ram cycles and is not re-settable.

Maintenance counter: Cycle counter used for tracking maintenance intervals and may be reset. An access code is required to gain entry into the counter screen.

Parts counter: Counter used to track the number of completed parts during a production run. May be reset from the Run Screen (Job/learn key)

Hour meter: Records total “motor run” hours and is not re-settable.

Memory Tag / Job Storage and Back up

The Generation II control system is equipped with a battery backup circuit to prevent programmed job loss in the event of a power failure or when the machine electrical power is turned off. The battery has a nominal lifespan of three years after which time the battery discharges and all stored jobs will be lost if not saved to a memory tag. Stored jobs will also be lost when the battery is replaced unless jobs are “backed up” on a memory tag.

The backup procedure is detailed here:

1. Turn off main power to electrical enclosure.
2. Open enclosure door.
3. Insert Memory Tag into slot on front face of GII control module (Orientation does not matter).
4. Close electrical enclosure door.
5. Restore electrical power.
6. Start press brake.
7. After GII initializes, turn “Run/Program” switch to “Program.”
8. Select “Teach/Edit Job” and press Enter.
9. Use “Down Arrow” to select “Memory Tag” and press Enter.
10. Select desired function: “Backup Jobs” or “Restore Jobs” and press Enter.
11. Remove and store memory tag when data transfer is completed.

NOTE: *Do Not Remove Memory Stick While “Read/Write” is in progress.*

Memory Tag Part Number: T3132

Operating Parameters (Key required for access)

Initiation means

Hand: When the switch is in the “Hand” position the machine is controlled from the Two-Hand control. The palm buttons must be engaged simultaneously to initiate a press cycle.

Foot: When the “Foot” mode is selected, the press is controlled by the footswitch alone.

Hand/Foot: This is a sequencing mode of operation which utilizes both Hand and Foot modes. Ram movement is initialized by Hand mode and then transferred to Foot mode at the speed change position. Simultaneously depressing and maintaining both of the palm buttons initiates the sequence. At the speed change position, the ram stops and control is transferred to the footswitch. Activation of the footswitch will complete the ram cycle.

Foot/Foot: This is a sequencing mode of operation that utilizes a double Footswitch actuation. Ram movement is initialized by operating the footswitch control. The pressbrake ram travels downward in approach speed to the speed change point, where the ram stops movement. Reactivation of the footswitch will complete the ram cycle.

Run modes

Off: When the “Off” mode is selected, all Press Brake movement (up or down) is disabled. Only the hydraulic motor can be started when the Operating Mode switch is in this position.

Inch: When the Inch mode is selected, the Press Brake ram will descend when the palm buttons are actuated. Releasing the palm buttons will cause the ram to stop. Re-initiating the palm buttons will restart downward ram movement. At the bottom of stroke position the ram will stop, and must be raised by depressing the Ram Up button. This mode is useful for setting or changing tooling, and setting up a job.

Run 1: When the Run 1 mode is selected, the ram will descend when the dual palm buttons are depressed. When the dual palm buttons are released at any point during the down stroke, the ram will pause. Downward motion will resume when the dual palm buttons are re-activated. The ram will automatically return to the top of stroke position when the bottom stop position is reached.

Run 2: When the Run 2 mode is selected, the ram will descend when the dual palm buttons are depressed. When the dual palm buttons are released during the down stroke, or when the bottom stop position is reached, the ram will automatically return to the top of stroke position.

Run 3: When The Run 3 mode is selected, the ram will descend when the dual palm buttons are depressed. When the dual palm buttons are released during the down stroke, the ram will stop. When the ram reaches the bottom stop position, the ram may be “inched” up by “toggling the dual palm buttons. Run 3 will allow the operator control of the ram with the dual palm buttons during the return stroke

Finishing Speed (Optional)

Finishing speed is incorporated into the control configuration to permit the press brake ram to enter a slower pressing speed, enabling a greater degree of ram repeatability without the CNC control.

Ram Return Modes

Low

Low, or “slow” return when selected, is a function where the ram will return slowly from the bottom of stroke to the top of stroke.

Low / High

Low, or “slow” return when selected, is a function where the ram will return slowly from the bottom of stroke to the original speed change point. At the speed change point, the ram will revert to the normal or “high” return speed

High

High-speed return when selected, is a function where the ram will return to the top of stroke position in the high speed.

Steps for Entering Names and Numbers

Refer to the letters on the number keys to select the desired characters.

With each press of a numeric key, the displayed character appears in the following order:

Number first, then the corresponding letter on the key (Upper Case only). After a character is entered, the cursor will automatically advance to the next position


	Number of Times Key is Depressed				
Keys	1	2	3	4	5
1	1				
2ABC	2	A	B	C	
3DEF	3	D	E	F	
4GHI	4	G	H	I	
5JKL	5	J	K	L	
6MNO	6	M	N	O	
7PQRS	7	P	Q	R	S
8TUV	8	T	U	V	
9WXYZ	9	W	X	Y	Z
0	0				

If you make a mistake while entering a name

Use BKSP (Backspace) to move the cursor to the incorrect character, enter the correct character.

POWER UP

The following screens are displayed upon power up of the control

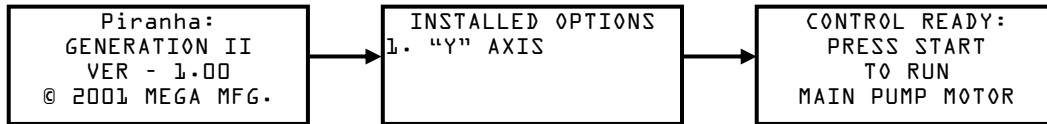

Depressing the START button on the console will start the main pump motor and initialize the control for operation or programming.

Machine set-up: (Security Code required for access)

Programming menu items are accessed with the RUN/PROGRAM key selector in the Program mode. Use the UP and DOWN arrow keys to select from the main program screen.



PROGRAM

```
HAND      SINGLE
1. TEACH/EDIT JOB
2. SET BEND NUMBER
>3. MACHINE SETUP
```

The main program screen displays the HAND/FOOT selection and the current operation mode.

↑/YES

↓/NO

ENTER

```
ENTER SECURITY CODE

**** CODE
```

Tip: Either Use ↑↓ keys to select desired menu item then Enter, or press number corresponding to desired menu item.

```
>1. ANTI-TIE-DOWN
2. MAINT COUNTER
3. STM TEST
4. SECURITY CODE
```

The MACHINE SETUP menu is for machine settings that can be modified by the user. The security code (9999 or code set by supervisor) must be entered to gain access to this screen. The security code field will accept up to six digits.

```
5. INCH/MM DISPLAY
6. MACHINE-COUNTER
7. HOUR METER
8. LIGHT CURTAIN
```

```
9. PEAK/TRACK
0. BACKGAUGE
```

Tip: Either Use ↑↓ keys to select desired menu item then Enter, or press number corresponding to desired menu item.

>1 ANTI-TIE-DOWN

```
TIMERS:
ANTI-TIE-DOWN

500 MS
```

NOTE: 500 MS is a default parameter. This value may be changed for a specific job application if required.


>2 MAINT COUNTER

```
MAINT COUNTER
PRESS CLR TO RESET


123456
```

Cycle counter used for tracking maintenance intervals and may be reset by depressing the CLR (Clear) button..


>3 STM TEST (Stop Time Measurement)

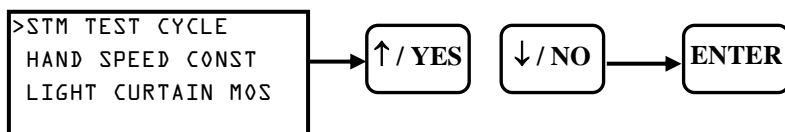

>STM TEST CYCLE

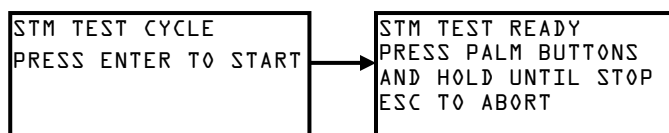


>HAND SPEED CONST

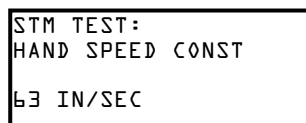


NOTE: 63 in/sec is a default parameter. This value may be changed for a specific job application if required.

>LIGHT CURTAIN MOS (Minimum Object Sensitivity)

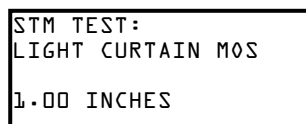


NOTE: This inch value is the minimum object sensitivity of the light curtain.

>4 SECURITY CODE

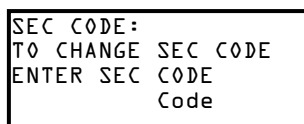


To change the supervisor security code, enter desired code. May be a combination of Alpha/Numeric symbols up to six digits long. NOTE: Once this security code is changed, the default security code (9999) will no longer be active.

>5 INCH/MM DISPLAY

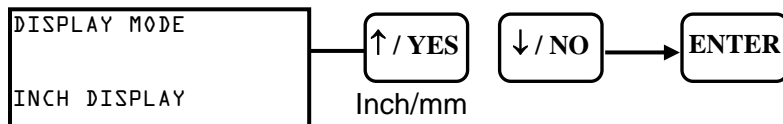

>6 MACHINE COUNTER

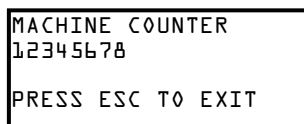

Displays ram cycles and is not re-settable

>7 HOUR METER

```

HOUR METER
1234567.1
PRESS ESC TO EXIT
    
```

Displays motor run hours and is not re-settable

>8 LIGHT CURTAIN

```

LIGHT CURTAIN:
LIGHT CURTAIN
OFF
    
```

↑ / YES ↓ / NO ENTER

OFF/ON

>9 TONNAGE READOUT (Optional)

```

TONNAGE READOUT:
    
```

>0 TOS TEST POSN

```

POSITION:
TOS TEST POSN
0.XXX
    
```

.XXX ENTER

>TOS TIMER

```

TIMERS:
TOS TIMERS
.XX SEC
    
```

.XX ENTER

>9 ↓ / NO ↓ / NO ↓ / NO

>BACKGAGUE ENTER


```

BACKGAUGE:
TYPE
NONE
    
```

↑ / YES ↓ / NO ENTER

NONE/HURCO/AUTOMEC

Programming Jobs (Key required for access)

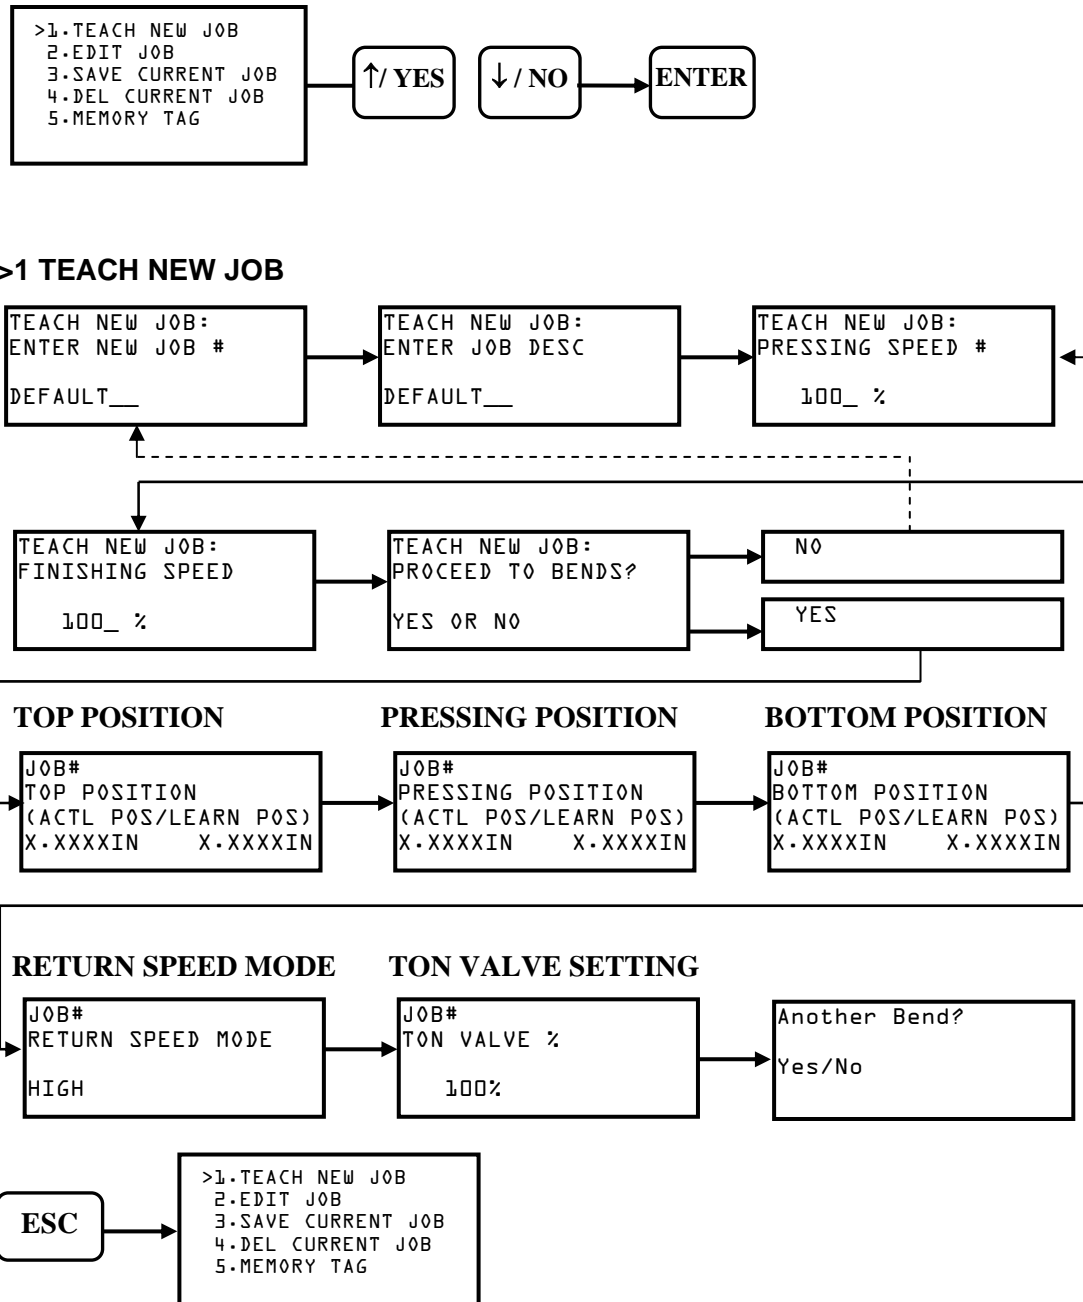


Press #3 to Save Job when complete, and press ESC to exit back to main menu.

>2 EDIT JOB


```
>EDIT JOB
EDIT BEND
DELETE BEND
INSERT BEND
```

Tip: Use ↑↓ keys to select desired menu item then Enter.

EDIT JOB

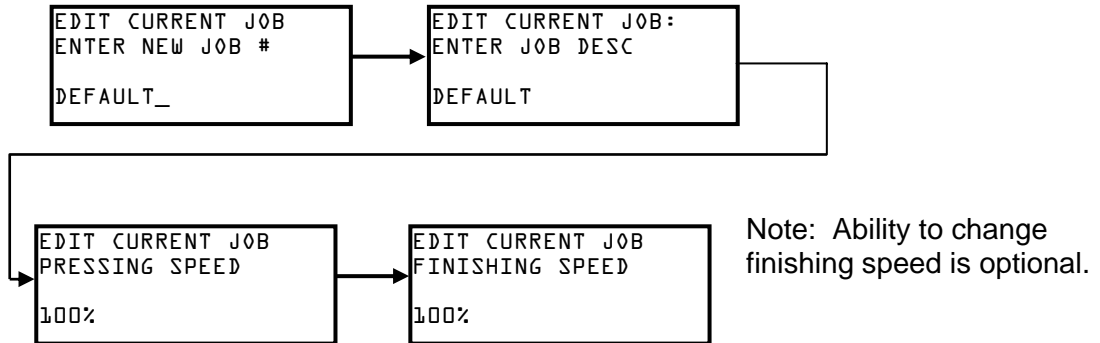

EDIT BEND

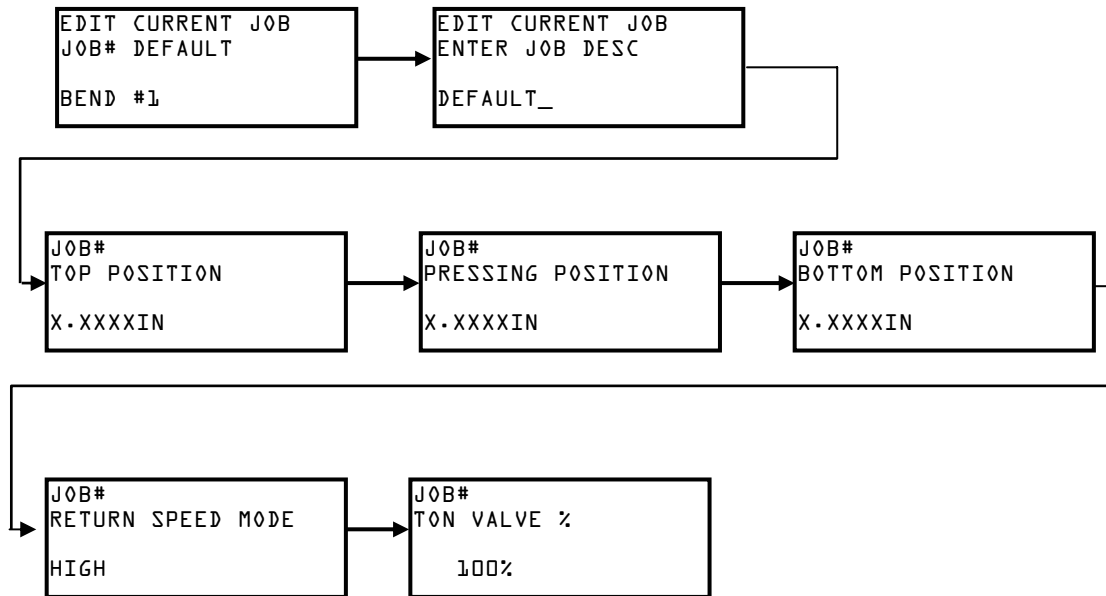

DELETE BEND


```
EDIT CURRENT JOB
JOB# DEFAULT
DELETE BEND #1
```

Enter YES or NO to delete a bend displayed for the current job.

INSERT BEND

```
EDIT CURRENT JOB
JOB# DEFAULT
INSERT BEND #1
```

Enter YES or NO to insert a bend in front of the bend # displayed for the current Job.

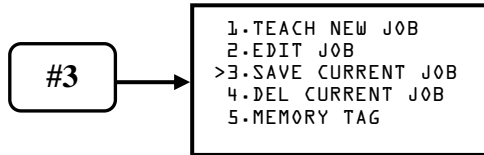


Save job when complete, and press ESC to exit back to main menu.

Run Jobs

RUN




1 Choose Program

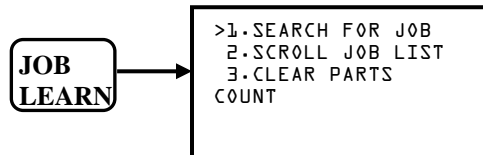

Choose Menu 1. or 2. to choose job to run.

Tip: Either Use ↑↓ keys to select desired menu item then Enter, or press number corresponding to desired menu item.

2 Reset Parts Counter

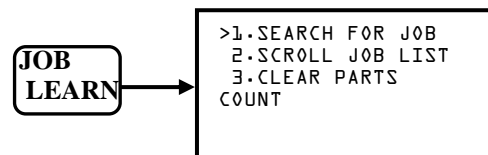

Choose Menu 3. To clear parts counter.

Run job after making selection.

Setting Limits for Forming

WARNING: NEVER GRASP THE MATERIAL WITH FINGERS OR THUMBS ON TOP OF THE MATERIAL. IF WIDE SHEETS MUST BE HELD DURING FORMING, SUPPORT THE MATERIAL FROM BELOW WITH THE OPEN PALM, KEEPING FINGERS AND THUMBS UNDER THE MATERIAL. KEEP ALL PARTS OF THE BODY CLEAR OF THE UPWARD TRAVEL OF THE MATERIAL

Programming a Simple Job

1. Start Press Brake motor by depressing the green START button.
2. Rotate keyed Programming switch to “PROG” (program) Mode.
3. Press #1 on keypad.
4. On new screen, ensure arrow is on #1 (>1), press ENTER.
5. Key in a job number (11 characters max) and press ENTER.
6. Key in a job description (21 characters max) and press ENTER (To bypass description screen, press CLR (clear) then ENTER)
7. Key in Pressing Speed to desired value and press ENTER.
8. Key in Finishing Speed to desired value and press ENTER.
9. Press “Yes” button to proceed to bends.
10. Key in desired Top of Stroke position and press ENTER –or-
Move press ram to desired position, then press JOB LEARN button to save position. Press ENTER.
11. Key in desired Speed Change position and press ENTER –or-
Move press ram to desired position, then press JOB LEARN button to save position. Press ENTER.
12. Key in desired Bottom of Stroke position and press ENTER –or-
Move press ram to desired position, then press JOB LEARN button to save position. Press ENTER.
13. Select Return Speed mode by toggling the UP or DOWN arrows and press ENTER.
14. Set Bend Tonnage (if equipped) and press ENTER.
15. To program additional bends, press YES and repeat steps 7-15.
16. If additional bends are not required, press NO.
17. Press #3 to save job.
18. Rotate Keyed Programming switch to “RUN” Mode and cycle press.

Edit a Bend

1. With Press Brake motor running and current job enabled, Rotate keyed Programming switch to “PROG” (program) Mode.
2. Press #1 on keypad.
3. On new screen, ensure arrow is on “EDIT BEND”(>EDIT BEND), press ENTER.
4. Arrow to EDIT BEND and press ENTER
5. Arrow to desired bend number (or bend function) and press ENTER,
6. If editing ram position, use either arrow key for minute position changes or program new ram position and press ENTER
7. Rotate keyed Program switch to “RUN”

Recalling a Job

1. Start Press Brake motor by depressing the green START button.
2. Rotate keyed Programming switch to "RUN" Mode.
3. Press "JOB/LEARN" button on keypad.
4. Select from Three Options:
 - a. SEARCH FOR JOB
 - b. SCROLL JOB LIST
 - c. CLEAR PARTS COUNT
5. Choose the desired option by depressing the corresponding number on the keypad or by depressing the "↑" or "↓" arrow keys until the desired job has a ">" next to it. Proceed as follows:

Search For Job Option

1. Enter job name/number or beginning search string identifier and press ENTER on keypad.
2. Depress the "↑" or "↓" arrow keys until the desired job has a ">" next to it and press ENTER.
3. Press ESC twice to return to the RUN screen.
4. Job is active and may be "run."

Scroll For Job Option

1. Displays complete database in alphabetical/numeric order.
2. Depress the "↑" or "↓" arrow keys until the desired job has a ">" next to it and press ENTER.
3. Press ESC twice to return to the RUN screen.
4. Job is active and may be "run."

Clear Parts Count

1. Permits the parts counter to be reset.
2. Follow onscreen instructions.
3. After confirming clear, press ESC on keypad until standard RUN screen is displayed.

Steps To Turn Off A CNC Control In Gen II

1. Rotate keyed selector switch to PROGRAM
2. Type "3" for MACHINE SETUP
3. Enter Supervisor Code and press "ENTER"
4. Use ↑ and ↓ until ">" is to the left of BACK GAUGE option and press ENTER
5. Use ↑ and ↓ until NONE is showing and press ENTER
6. Press ESC

NOTE: The press will not cycle until the CNC bypass jumper "Plug" replaces the CNC interface plug. The bypass plug is located inside the main press brake electrical enclosure. Unplug the CNC connector and replace with the bypass plug for Generation II control.

Steps To Turn On A CNC Control In Gen II

1. Rotate keyed selector switch to PROGRAM
2. Type "3" for MACHINE SETUP
3. Enter Supervisor Code and press ENTER
4. Use ↑ and ↓ until ">" is to the left of BACK GAUGE option and press ENTER
5. Use ↑ and ↓ until AUTOMEC or HURCO is showing and press ENTER
6. Press ESC – Only option 3-MACHINE SETUP should be available now
7. Rotate keyed selector switch to RUN

8. CNC is in control.

Change Speed When A 3rd Party CNC Is Running:

1. Rotate keyed selector switch to PROGRAM
2. Type "3" for MACHINE SETUP
3. Enter Supervisor Code and press "ENTER"
4. Use ↑ and ↓ until ">" is to the left of BACK GAUGE option and press ENTER
5. Use ↑ and ↓ until NONE is showing and press ENTER
6. Press ESC
7. Type "1" for TEACH/EDIT JOB
8. Type "2" for EDIT CURRENT JOB
9. Use ↑ and ↓ until ">" is to the left of EDIT JOB and press ENTER
10. Press ENTER until PRESSING SPEED is displayed
11. Type in desired Pressing Speed % and press ENTER
12. Press ESC three times until Main Program Menu is showing
13. Type "3" for MACHINE SETUP
14. Enter Supervisor Code and press ENTER
15. Use ↑ and ↓ until ">" is to the left of BACK GAUGE option and press ENTER
16. Use ↑ and ↓ until AUTOMECH or HURCO is showing and press ENTER
17. Press ESC – Only option 3-MACHINE SETUP should be available now
18. Rotate keyed selector switch to RUN
19. CNC is in control.

Setting the LOWER RAM LIMIT for AUTOMECH CNC Back Gauges

This software revision/version allows the user of one of our press brakes to set the LOWER RAM LIMIT as a back-up lower limit when they have an installed 3rd Party CNC Back Gauge, which is controlling the RAM. When an Automech or Hurco back gauge has been chosen in the supervisor code protected 3-MACHINE SETUP menu, LOWER RAM LIMIT now shows as an available parameter in the supervisor code protected 3-MACHINE SETUP menu.

Procedure for setting the LOWER RAM LIMIT for AUTOMECH CNC Back Gauges

1. Assuming that AUTOMECH has been chosen as the Back Gauge in the 3-MACHINE SETUP menu
2. Turn the key switch to PROGRAM
3. Type “3” for the 3-MACHINE SETUP menu
4. Enter the Supervisor Code (factory default is 9999) and hit ENTER
5. Use the ↑ or ↓ buttons until the “>” is next to LOWER RAM LIMIT and hit ENTER
6. Change the LOWER RAM LIMIT to 0”, this moves the Generation II LOWER RAM LIMIT out of the way and hit ENTER

CAUTION – This overrides the factory set LOWER RAM LIMIT and can allow the user to bottom out the cylinder!

7. ESC out to the menu which shows 3-MACHINE SETUP
8. Change the run MODE to INCH or RUN 3 – Mode that stops the machine at the bottom of stroke
9. Turn the key switch to RUN
10. Setup and run job using the AUTOMECH CNC
11. At the bottom of stroke, note the scale reading shown on the dual palm pedestal
12. Complete the stroke
13. Turn the key to PROGRAM
14. Type “3” for 3-MACHINE SETUP menu
15. Enter the Supervisor Code and hit ENTER
16. Use ↓ to get to LOWER RAM LIMIT and hit ENTER
17. Change the LOWER RAM LIMIT to a number that does not interfere with the AUTOMECH’s control of the bottom of the bend but meets the following AUTOMECH instructions:

**IMPORTANT SAFETY NOTICE TO PRESS BRAKE OPERATORS
AND SET UP PERSONNEL**

ALWAYS SET PRESS BRAKE LOWER RAM LIMIT WITH PUNCH AND DIE IN PLACE BEFORE OPERATING SYSTEM. SET LOWER RAM LIMIT TO ALLOW FOR THE DEEPEST BEND BUT NOT DEEP ENOUGH TO ALLOW A PUNCH / DIE COLLISION. BE SURE TO ALLOW FOR MATERIAL THICKNESS.

THIS **IMPORTANT SAFETY BACK UP** GUARDS AGAINST PROGRAMMING ERRORS AND SYSTEM MALFUNCTION.

CAUTION – This allows the user to override the factory set LOWER RAM LIMIT!

18. Hit ESC to get out of MACHINE SETUP menu
19. Turn the key to RUN
20. Machine is ready to run

Bed Leveling Adjustment

Located on the left-hand side when facing the front of the machine, is the Bed Leveling Adjustment Assembly. The Bed Leveling Assembly provides a means of adjusting the Ram to Bed parallelism; adjustment also permits an out of parallel condition to produce tapered bends.

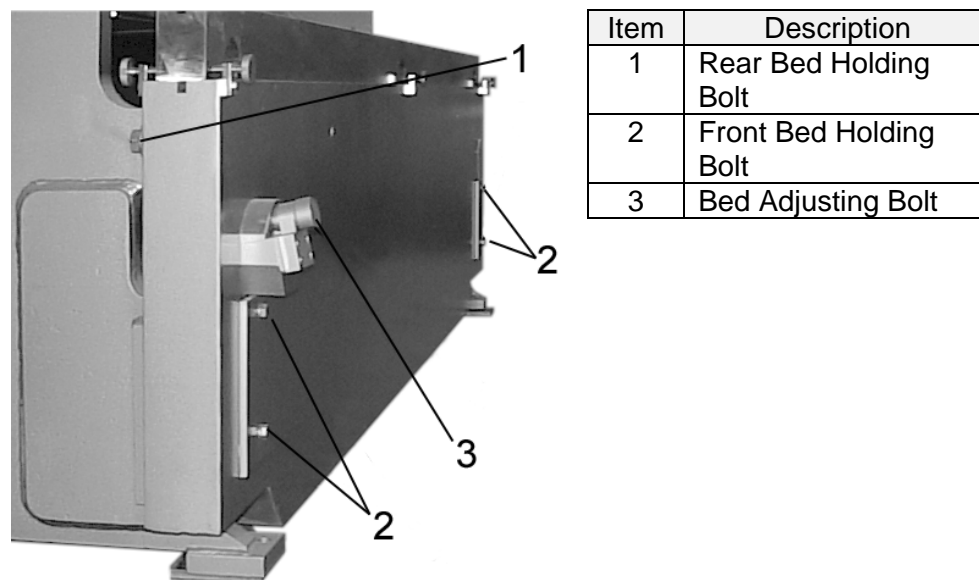


Figure 8: Bed Tilt Wedge Assembly

The following steps represent the typical bed leveling procedure.

1. To adjust the bed, loosen the six bed holding bolts. Two are located on the rear side of the bed, one on each end of the press. The other four are located front side of the bed, two on each end of the bed. (See *Figure 8 Items 1 & 2*).
2. Rotate the adjusting bolt clockwise to lift the bed and counterclockwise to lower. (See *Figure 8 Item 3*).
3. Snug the bed holding bolts. The bed holding bolts should only be snug enough to compress the lock washers, but should not be over tightened. (See *Figure 8 Item 1 & 2*)

Note: Do not adjust bed tilt with the bed under load.

Tooling Installation

Before attempting to install, set or remove any dies from the press brake, the safety section of this manual must be read and understood.

The exact procedure for installation, setting and removal of dies may vary with the type of die used. The following steps are a generalized representation and may be tempered to suit the particular application, though not to the extent of being unsafe.

Always review the instructions provided in this manual and observe the press brake safety rules!

! **NEVER** install chipped, cracked, or damaged dies.

Insure that the die is of the correct size and type for the press brake, reducing the risk of overloading the machine.

Insure that no tools, bolts or other obstructions are in the die area prior to operating the press brake.

Locate any available safety handling tools required.

Keep the floor and surrounding area clean and free of obstruction, debris and oil.

Press Brake Preparation

1. Start the hydraulic power unit.
2. Lower the ram to the bottom position.
3. Remove all power from the press brake.
4. Turn the operating mode switch to the Off position.

Die Insertion

! **NEVER** at any time allow fingers or hands to be between the dies.

1. Insure that the Press Brake Preparation procedure has been completed before continuing with the insertion of dies.
2. Loosen the die rail set screws and punch clamps.
3. Insert the lower die from the end of the press brake, leaving several inches overhanging the end of the bed
4. Compare the distance between the ram and the lower die to the punch height, verifying sufficient clearance for insertion of the punch.
5. Adjust the position of the ram as required to allow the punch to rest on the lower die with the tongue of the die engaged in the punch clamp.
6. Safely transport the punch to the press brake and rest it on the extended portion of the lower die, aligning the tongue of the punch with the ram groove.

7. Slide the punch into the punch clamp groove aligning the ends of the punch and lower dies.
8. Adjust the ram bottom position to make the dies “kiss,” forcing the punch to fully engage in the punch clamp groove.
9. Tighten the punch clamps and the die rail set screws, securing the dies in the press brake.
10. Return the ram to the up position.

Tooling Removal

! **NEVER** at any time allow fingers or hands to be between the dies.

1. Lower the ram to have a few thousandths gap between the punch and lower die.
2. Loosen the die rail set screws and punch clamps.
3. Raise the ram position slightly upward and verify that the punch will remain resting in the lower die. If not, the punch clamps may require further loosening.
4. If additional clearance is required to allow die removal, adjust the ram position to loosen the die yet keep it well confined.
5. With the punch partially disengaged and guided in the loosened punch clamps, push both the upper and lower dies several inches out the end of the press brake. With hands at the end of the dies, push the dies from the end. NEVER place hands or fingers between the dies.
6. Properly position the die transport device at the end of the press brake to accept the punch.
7. With hands at the end of the punch, push the punch towards the transport device, allowing several inches to remain in the punch clamp.
8. Prepare the transport device to completely support the punch, securing the punch from falling as required.
9. Position the transport device to accept the lower die and slide it from the bed.

Tool Adjustments

The following steps are a generalized representation and may be tempered to suit the particular application though not to the extent of being unsafe. It is a good practice to allow for several sample parts during set up operation, lowering the ram in small increments until the desired bend is achieved without overloading the machine.

1. Insert a sample piece of material.
2. Adjust the ram limit switches as required (*see section 0*) until the desired bend angle is attained. Avoid *over-adjusting* the ram.

Note: Shimming may be required to compensate for punch and die wear and any bed or ram deflection.

Tonnage Requirements

See bending tonnage chart located on side of press brake for approximate bending requirements.

Die Rail Shimming

The Piranha 25 Press Brake is manufactured without a crown in the bed. Occasionally due to deflection, shimming may be required. If shimming is required under the die rail, shims must be placed in progressively thicker increments from each end of the bed (*see Figure 9*). Typically, shimming is required to compensate for bed deflection and must be performed by trained personnel. The following diagram is for reference purposes only as each application will have different requirements.

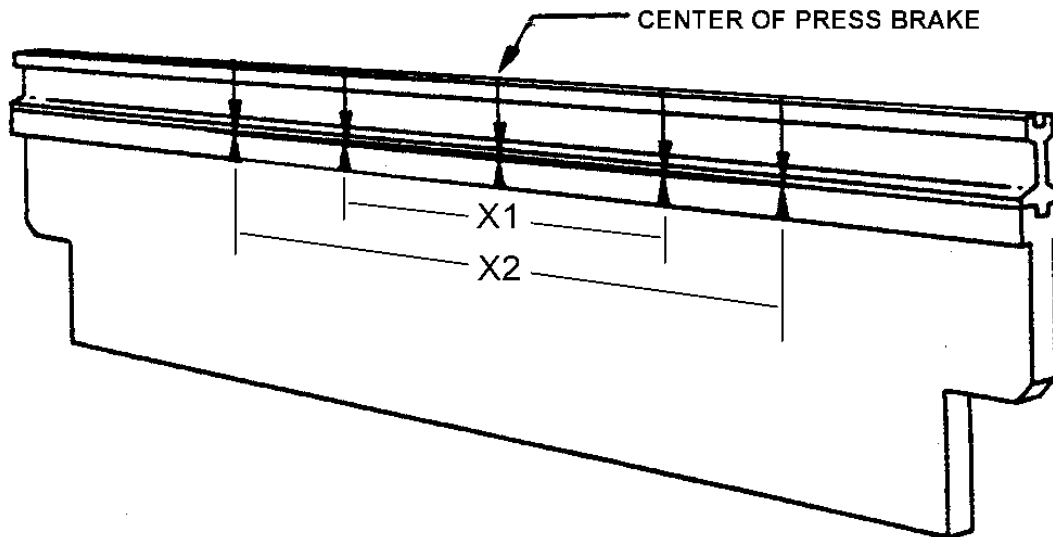


Figure 9: Die Rail Shimming Example

Maintenance Procedures

BEFORE MAINTAINING OR REPAIRING THE PRESS BRAKE, READ AND UNDERSTAND THE CURRENT ANSI B11.3 STANDARD.

This section describes the procedures and requirements for maintaining and repairing the major components of the Piranha 25 Press Brake.

Maintenance Schedule

This section outlines the suggested points and intervals for regular scheduled maintenance. The hydraulic power unit is very sensitive to dirt and other contaminants, but will provide many years of reliable service with a minimum amount of service. The operating temperature and the cleanliness of the oil directly effect the life of the hydraulic oil. Regular oil and filter changes will keep the system clean and free of sticking and clogged valves. Because hydraulic cylinders are lubricated with every stroke, keeping them clean and free of scratches and dings that may damage the cylinder rod seals is most important.

The Piranha 25 Press Brake is shipped with an extra hydraulic oil filter. It is important that after the first forty hours of operation the oil filter be replaced. Upon using the included extra oil filter it is suggested that a replacement filter be ordered for the next scheduled filter change.

See parts list for correct filter part number.

1. After First 40 hours:

- Change hydraulic filter
- Check fluid level
- Check gib clearances
- Grease ram slides
- Check fittings, bolts, nuts for tightness

2. Every 40 hours (weekly) thereafter:

- Grease ram slides.
- Check fittings, bolts, nuts for tightness

3. Every 3 months:

- Change hydraulic filter

It is recommended that the filter element be changed every 3 months depending on workload and environmental conditions. See repair parts list for re-ordering instructions and the part number.

- Check hydraulic fluid level
- Check gib clearances

4. Every Year:

- Grease electric motor

5. Every Two (2) years:

- Change hydraulic fluid

Gib Clearance Adjustment

Proper maintenance of the gibs will require periodic adjustment of the gib clearances.

Gib Adjustment

1. Position press brake ram so the ram slide is in full contact with the gibs.
2. Loosen Rear Adjustment Screw Jam Nuts on both ends of the press brake. (*See Figure 10 Item 1*)
3. Using a torque wrench of correct torque range, torque top and bottom set screws to **150-in. lbs.** (12.5-ft. lbs.).
4. Tighten remaining setscrews (between top and bottom set screws) to same torque.
5. **Repeat steps 2 & 3.**
6. Back off the set screws 1/8 turn and tighten jam nuts.
7. Repeat this procedure for the other end of the press brake.

Side Thrust Gib Adjustment

1. Position the press brake ram so the ram slide is in full contact with the gibs.
2. Verify that the ram is aligned with the bed (left to right).
3. Loosen the Slide Mounting Bracket Jam Nuts on both ends of the press brake. (*See Figure 10 Item 2*)
4. Using a torque wrench of correct torque range, torque the top and bottom setscrews to **150-in. lbs.** (12.5-ft. lbs.).
5. Repeat step 3 on the opposite end of the press brake.
6. Tighten the remaining setscrews (between the top and bottom setscrews) to the same torque.
7. Repeat step 3 on opposite end of the press brake.
8. **Re-torque setscrews on both ends of the press brake.**
9. Back off the setscrews 1/8 turn and tighten the jam nuts on the **left side of press only.**
10. Tighten the jam nuts on the right side of the press brake.

Ram Slides



Figure 10: Gib Explanation

Hydraulic Power Unit

The hydraulic power unit is a sophisticated and complex system. Only trained personnel should attempt to perform adjustment procedures on the unit. The power unit generates very high pressures. **Never check for leaks using your hands.**

Before servicing the hydraulic system, block the ram in the up position and turn the power off.

Oil Filter Replacement

Verify the exact element number prior to ordering the replacement element.

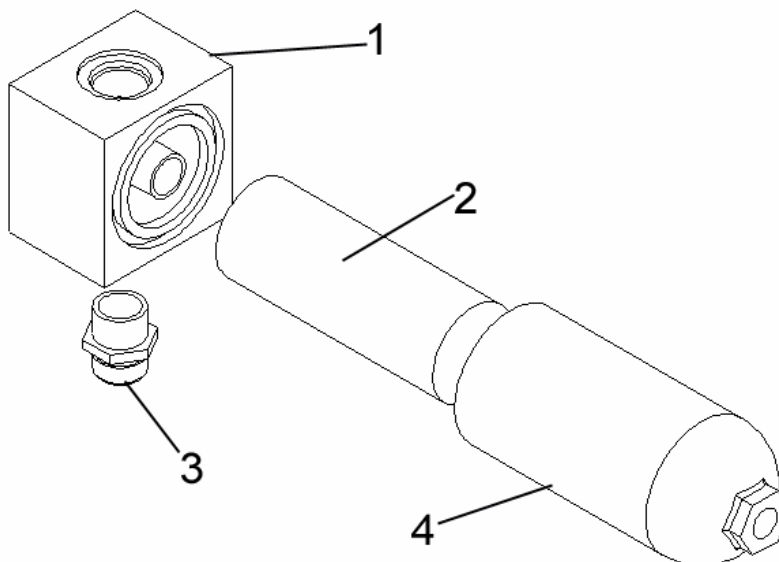


Figure 11: Oil Filter Assembly Exploded View

Item	Description
1	Filter Body
2	Filter Element
3	Fitting - inlet
4	Filter Bowl

Table 3: Oil Filter Assembly Descriptions

The following steps represent a typical filter element replacement.

1. Insure the main electric power is locked out at the safety disconnect.
2. Place a small container (½-gallon) under the filter bowl.
3. Remove the filter bowl by turning in a counterclockwise direction.
4. Remove the filter element by pulling and turning at the same time.
5. Lubricate the O-ring on the new filter with hydraulic oil and slide into place.
6. Wipe the inside of the filter element bowl and replace.

When changing the hydraulic oil, a new oil filter should also be installed.

Hydraulic, Electrical Diagrams & Components

Electrical Diagrams

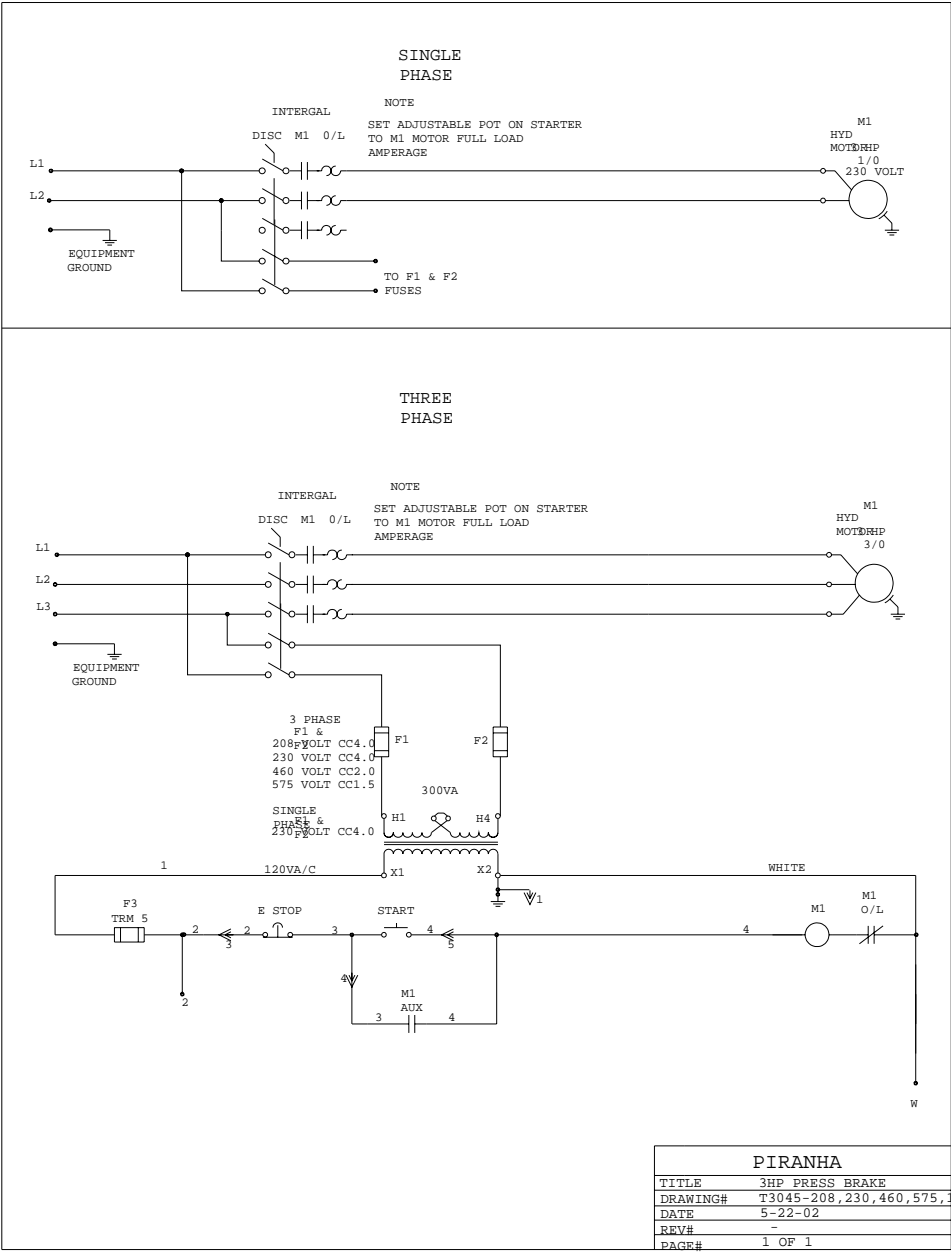


Figure 12: Electrical Diagram 1 of 4

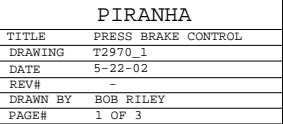


Figure 13: Electrical Diagram 2 of 4

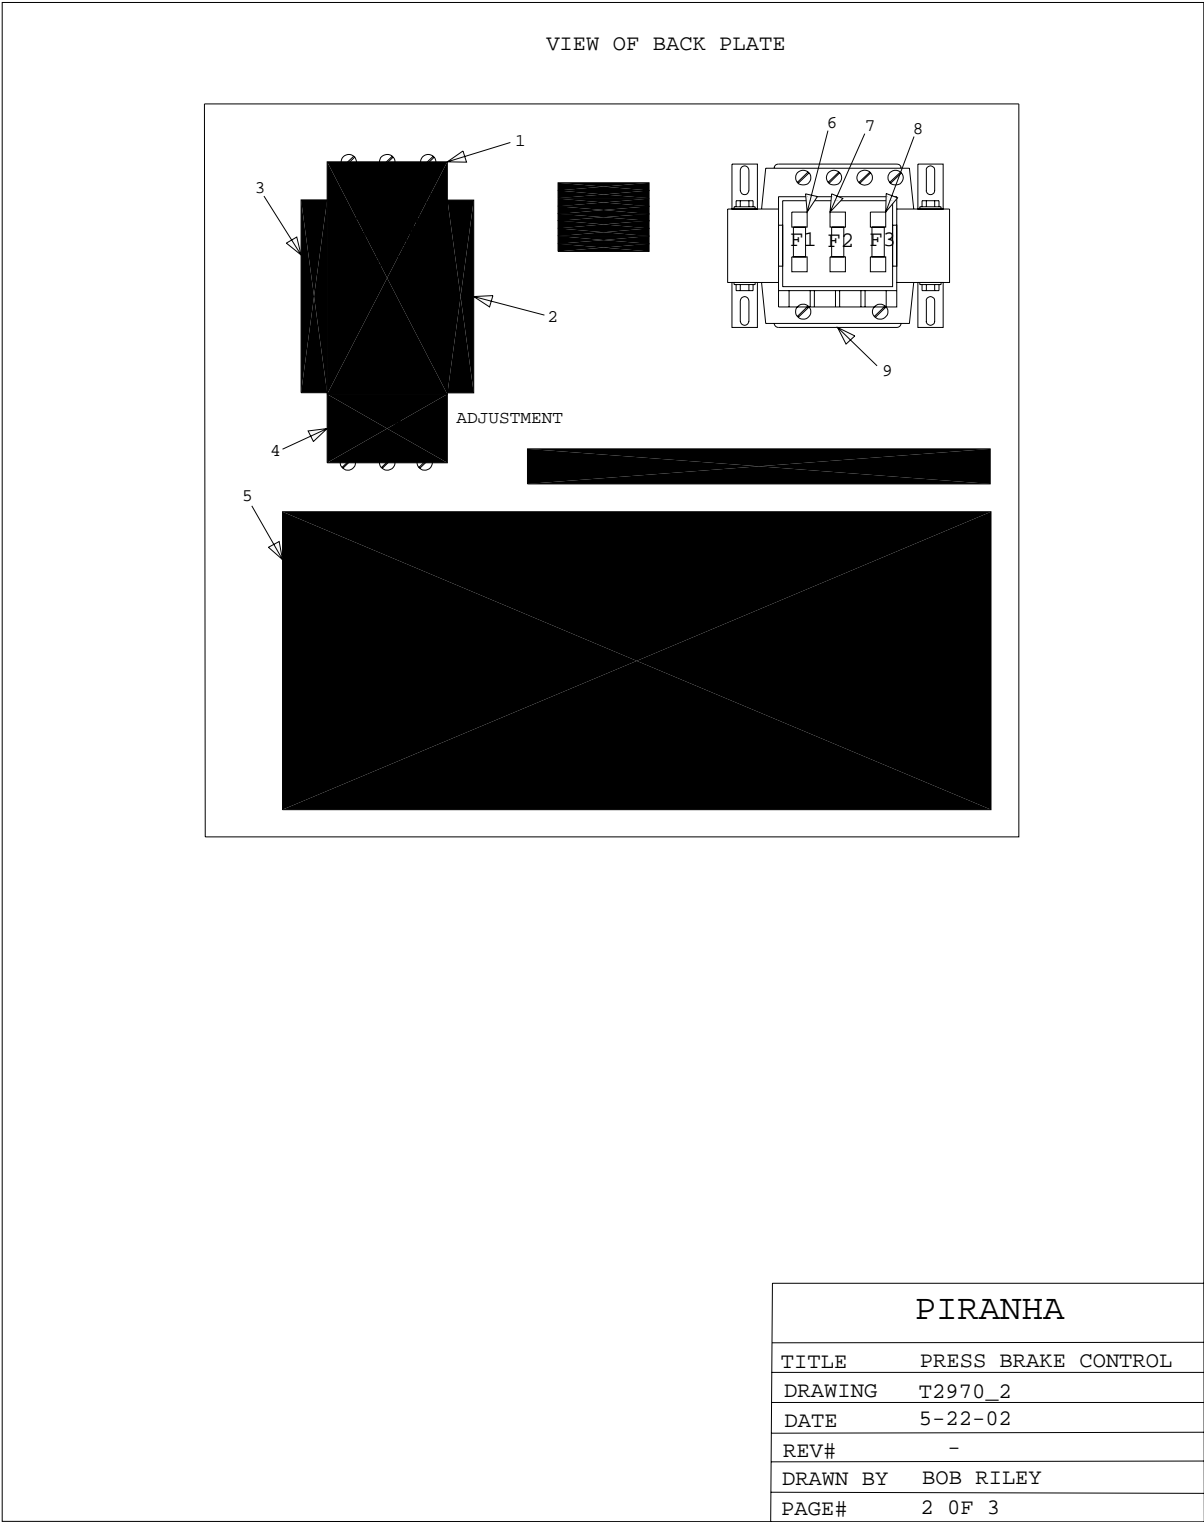


Figure 14: Electrical Diagram 3 of 4


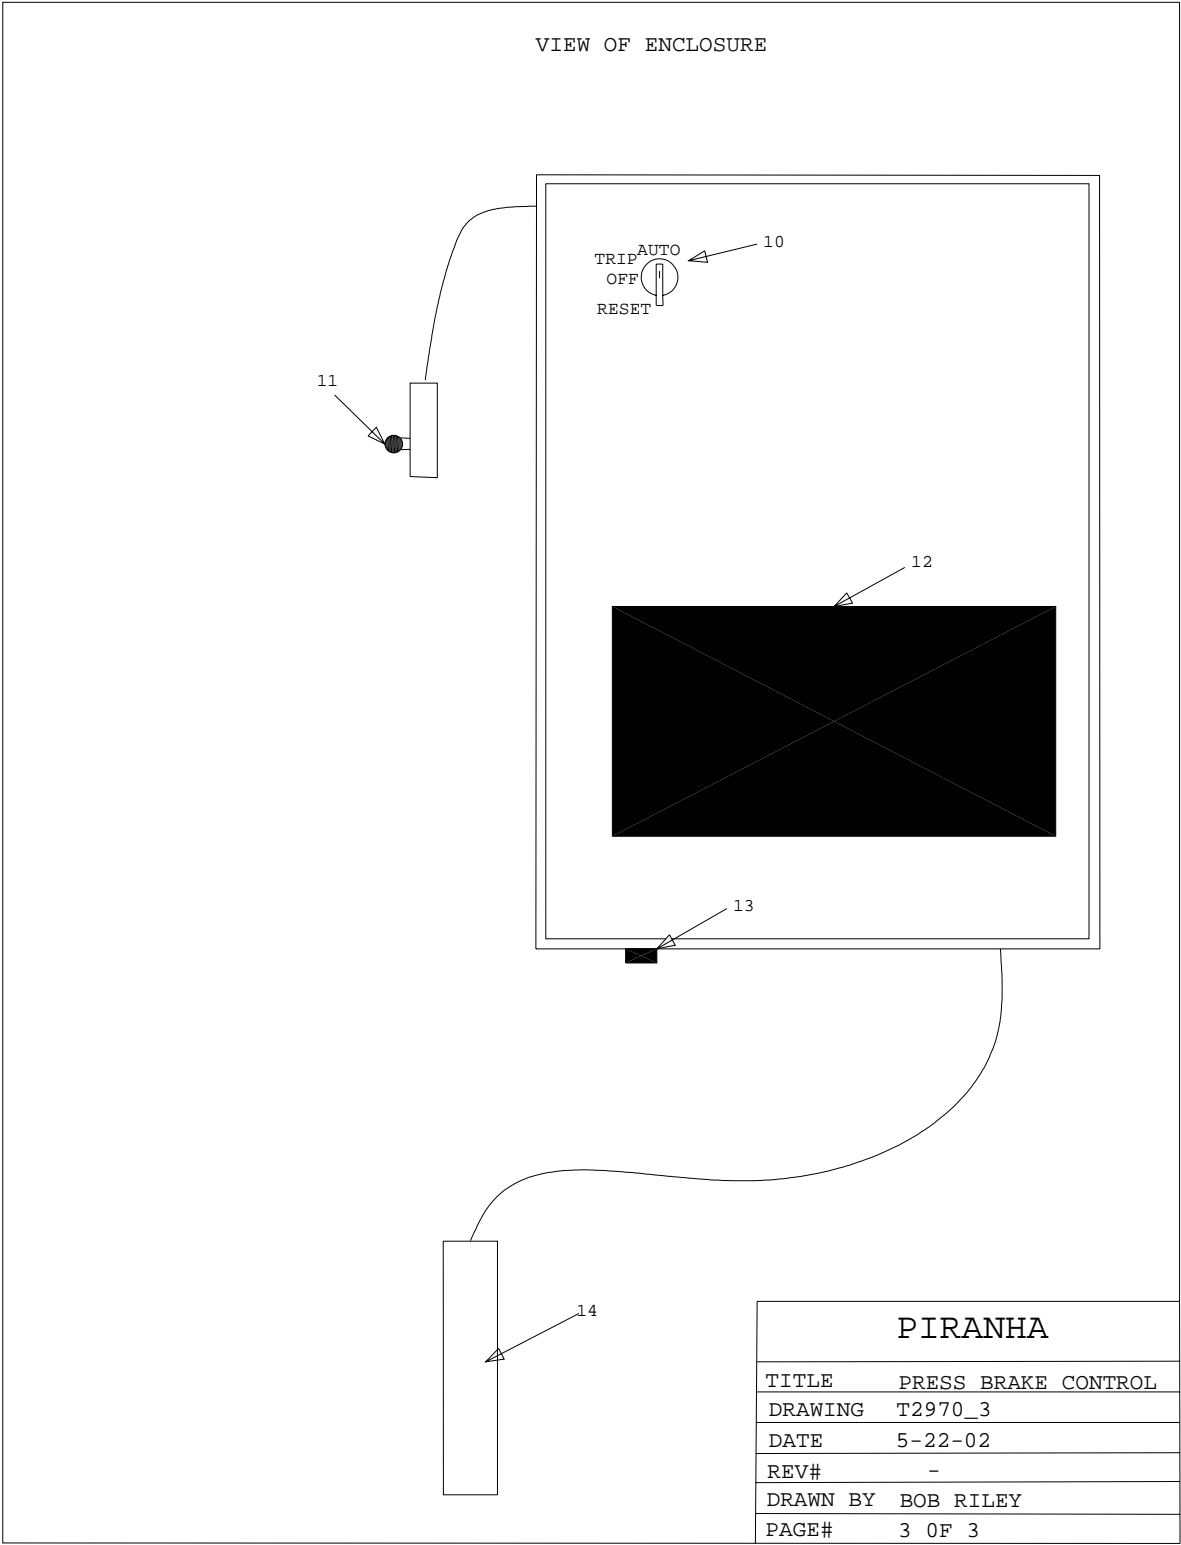


Figure 15: Electrical Diagram 4 of 4


Electrical Enclosure Component List

3-HP				
DESCRIPTION	QTY	HP/VOLTAGE	PIRANHA PT#	FIG.#
INTEGRAL STARTER	1	3/0 208-575V & 1/0 230V	T3158	1
INTEGRAL STARTER AUX.	1	3/0 208-575V & 1/0 230V	T3159	2
INTEGRAL STARTER DISC. CONTACTS	1	3/0 208-575V & 1/0 230V	T3160	3
INTEGRAL STARTER OVERLOAD	1	3/0 208V	T3161	4
INTEGRAL STARTER OVERLOAD	1	3/0 230V	T3162	4
INTEGRAL STARTER OVERLOAD	1	3/0 460V	T3163	4
INTEGRAL STARTER OVERLOAD	1	3/0 575V	T3164	4
INTEGRAL STARTER OVERLOAD	1	1/0 230V	T3165	4
GEN II CONTROL MODULE	1	ALL VOLTAGES & PHASES	T2267	5
FUSE, TRANSFORMER PRIMARY	2	3/0 208V	T2249	6 & 7
FUSE, TRANSFORMER PRIMARY	2	3/0 230V	T2249	6 & 7
FUSE, TRANSFORMER PRIMARY	2	3/0 460V	T3166	6 & 7
FUSE, TRANSFORMER PRIMARY	2	3/0 575V	0591700	6 & 7
FUSE, TRANSFORMER PRIMARY	2	1/0 230V	T2249	6 & 7
FUSE, TRANSFORMER SECONDARY	1	ALL VOLTAGES & PHASES	T3167	8
TRANSFORMER	1	3/0 208 V	0541638	9
TRANSFORMER	1	3/0 230 & 460V	05416491	9
TRANSFORMER	1	3/0 575V	0541639	9
TRANSFORMER	1	1/0 230V	05416491	9
INTEGRAL STARTER DISC. OPERATOR	1	ALL VOLTAGES & PHASES	T3168	10
LIMIT SWITCH	1	ALL VOLTAGES & PHASES	O531615	11
POWER SUPPLY, 24 VDC	1	ALL VOLTAGES & PHASES	T2560	12
RECP., DUAL PALM	1	ALL VOLTAGES & PHASES	T1311	13
MICRO PULSE SCALE	1	ALL VOLTAGES & PHASES	T1976	14

Pedestal Control Front view

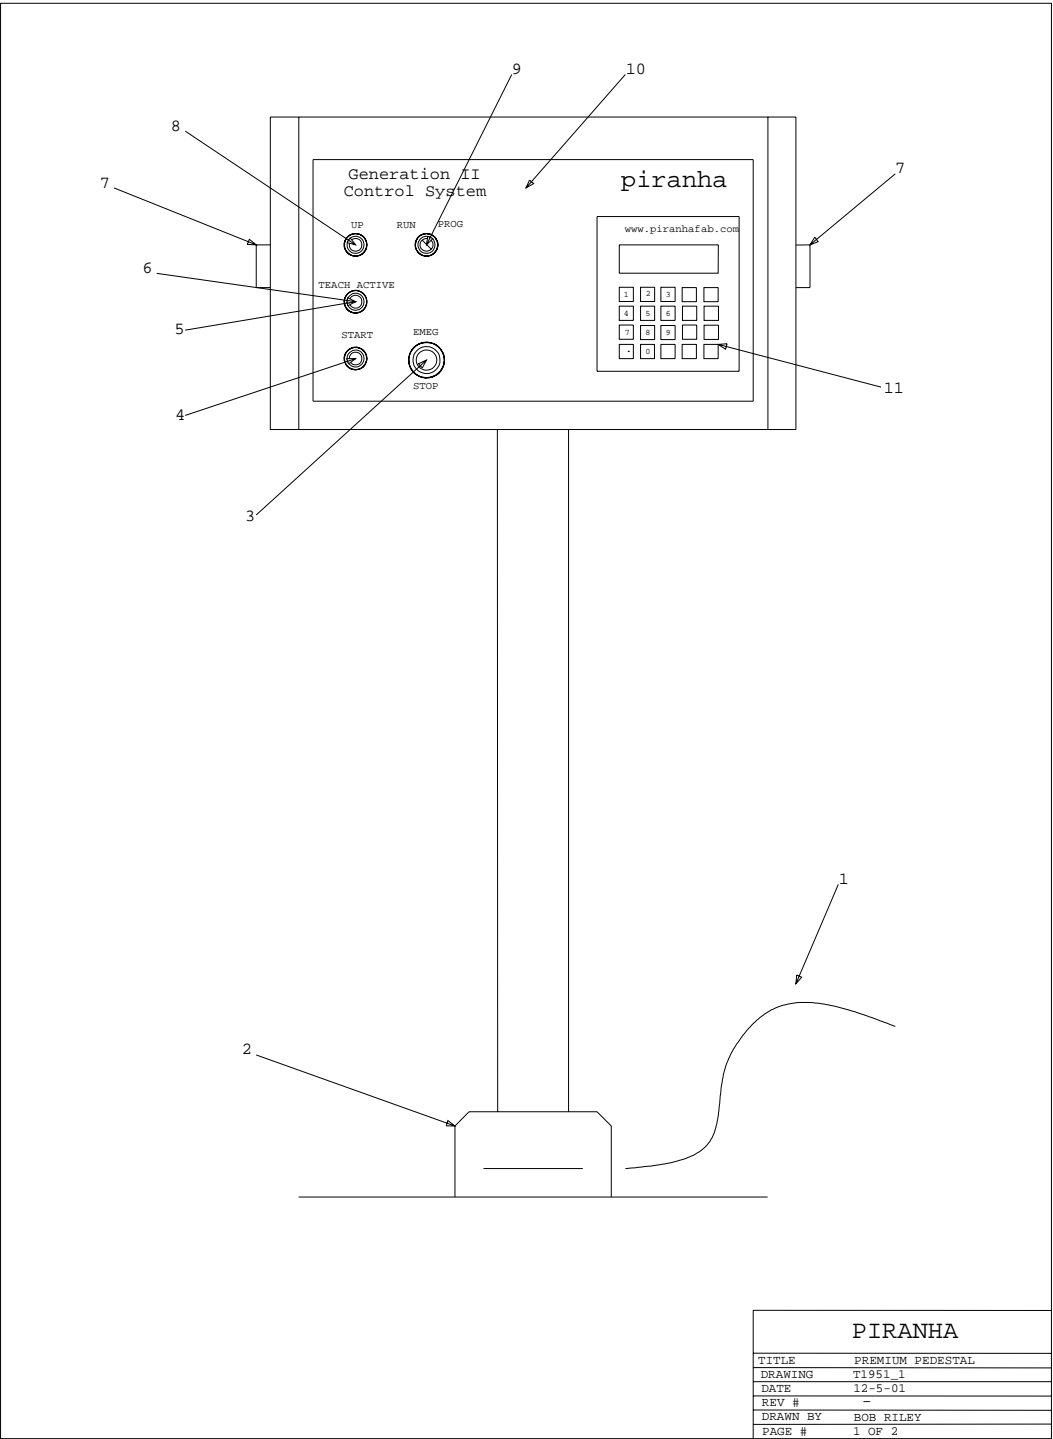

Pedestal Control Rear view

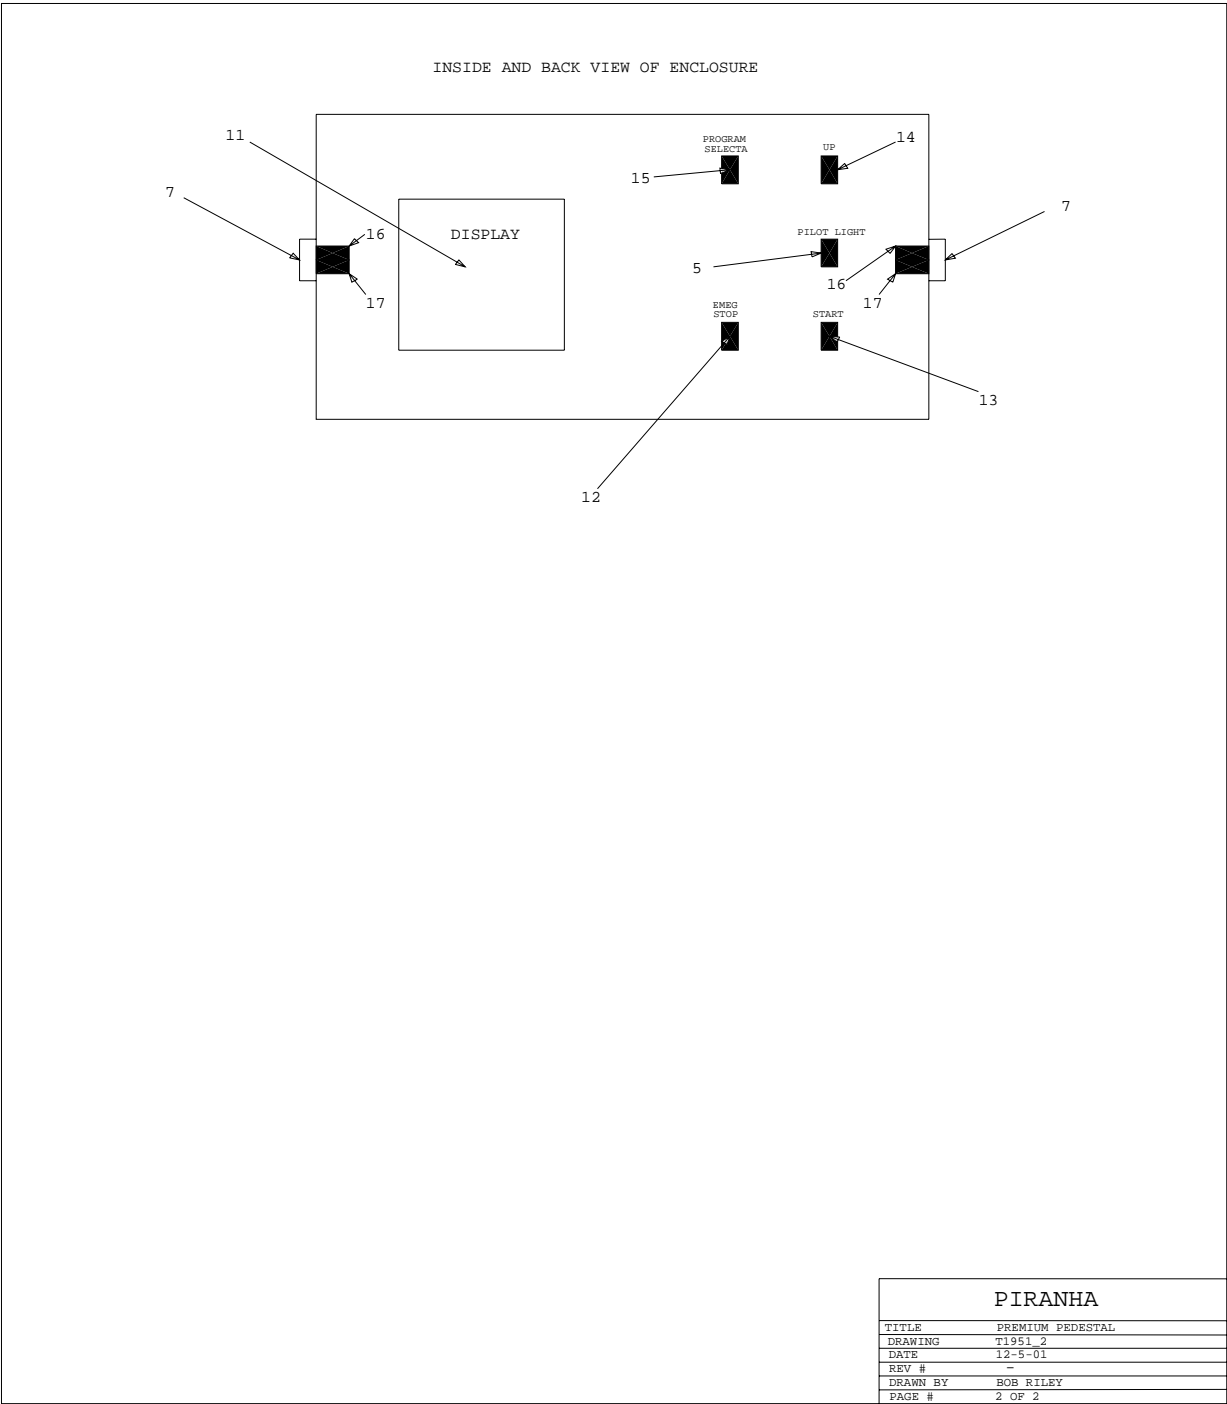

Pedestal Parts List

PREMIUM PEDESTAL

DESCRIPTION	QTY	FIG. #	PIRANHA PT#
FOOT SWITCH CORD/CONDUIT	1	1	T2595
FOOT SWITCH	1	2	T0746
E STOP OPERATOR	1	3	T0737-1
START OPERATOR	1	4	05316101-1
TEACH ACTIVE PILOT LIGHT, AMBER LED	1	5	T2596
AMBER PILOT LENS	1	6	T2300
DUAL PALM OPERATOR	2	7	T0748-1
UP OPERATOR, EXTD. YELLOW	1	8	T1668-1
PROGRAM SELECTA SWITCH OPERATOR	1	9	0531694-1
DECAL	1	10	T1952
DISPLAY MODULE	1	11	T2268
CONTACT BLOCK W/ BASE, N/C	1	12	05316121-1
CONTACT BLOCK W/ BASE, N/O	1	13	0531696-1
CONTACT BLOCK W/ BASE, N/C	1	14	05316121-1
CONTACT BLOCK W/ BASE, N/O	1	15	0531696-1
CONTACT BLOCK W/ BASE, N/O	2	16	0531696-1
CONTACT BLOCK, N/C	2	17	0591596-1

Hydraulic Diagram

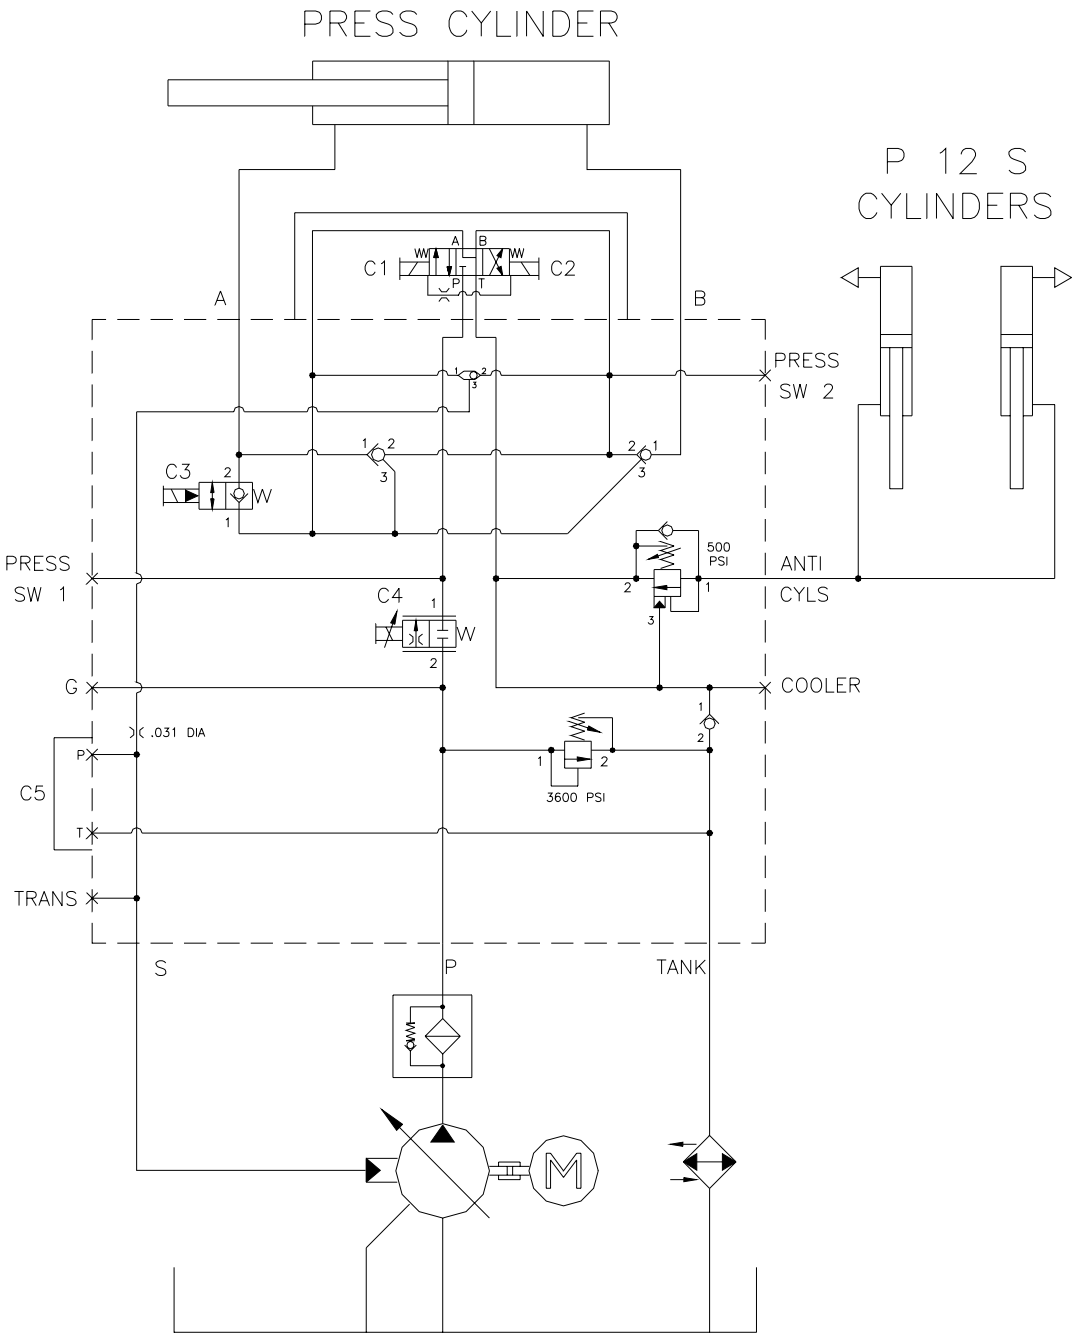


Figure 16: Hydraulic Diagram 1 of 1

Valve Body Assembly

ITEM	INSTALL TORQUE
2	30-35 FT. LBS.
3	30-35 FT. LBS.
4	150-160 FT. LBS.
5	45-50 FT. LBS.
6	150-160 FT. LBS.
7	30-35 FT. LBS.
8	45-50 FT. LBS.
9	25-30 FT. LBS.
10	20-22 FT. LBS.
13	11-12 FT. LBS.
17	6-7 FT. LBS.
19	30-35 FT. LBS.

NOTE: Item #9, coil to be hand tight.
When installing item #9 into item #8,
Item #8 must be torqued first.

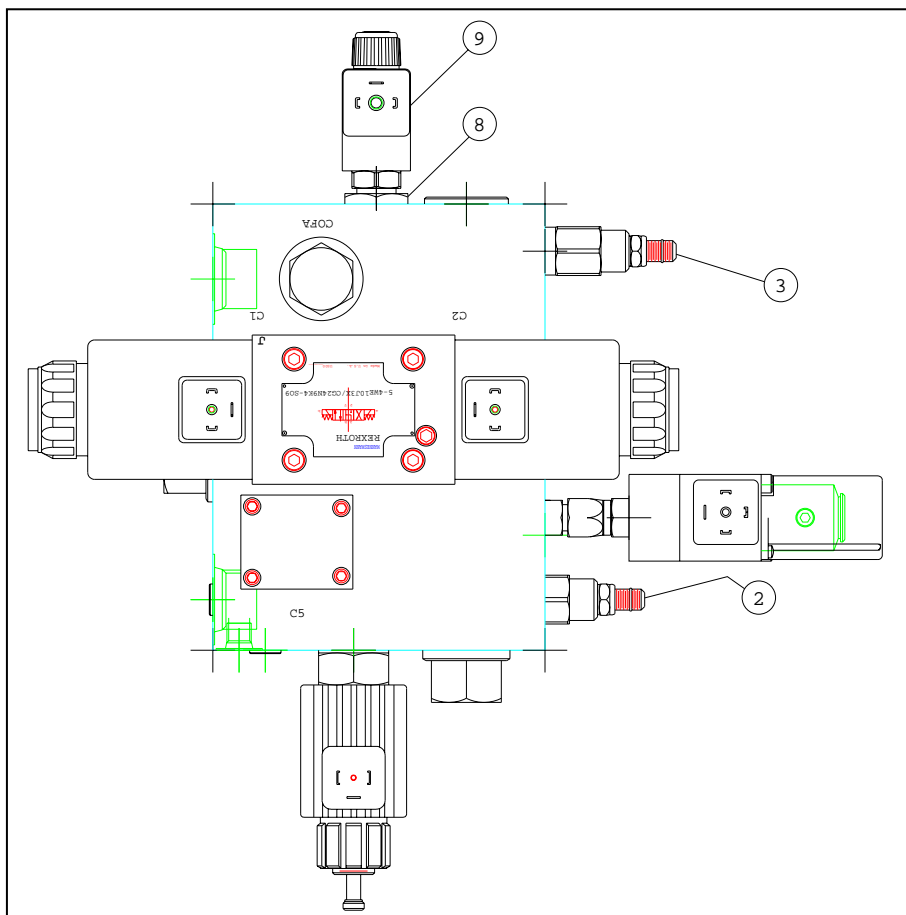


Figure 18: Valve Body Assembly Top View

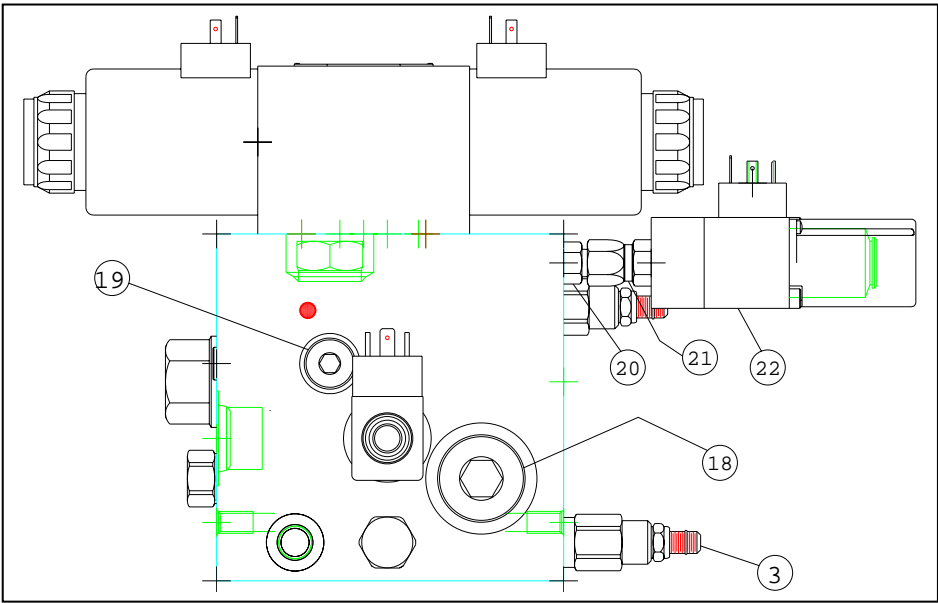


Figure 19: Valve Body Assembly Front View

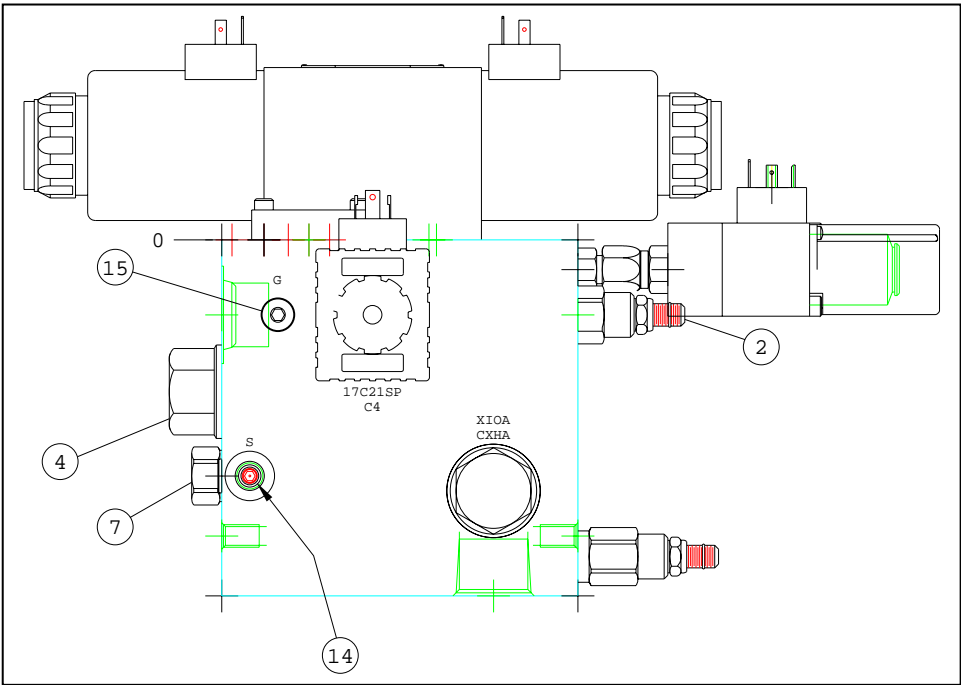


Figure 20: Valve Body Assembly Rear View

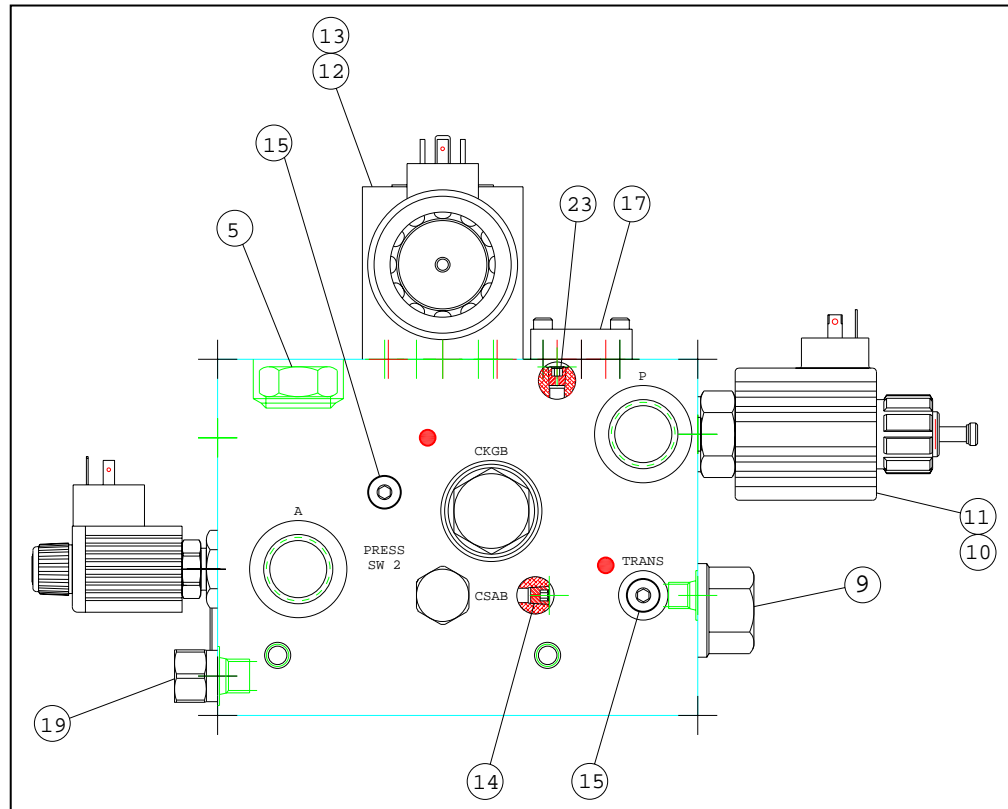


Figure 21: Valve Body Assembly Left Side View

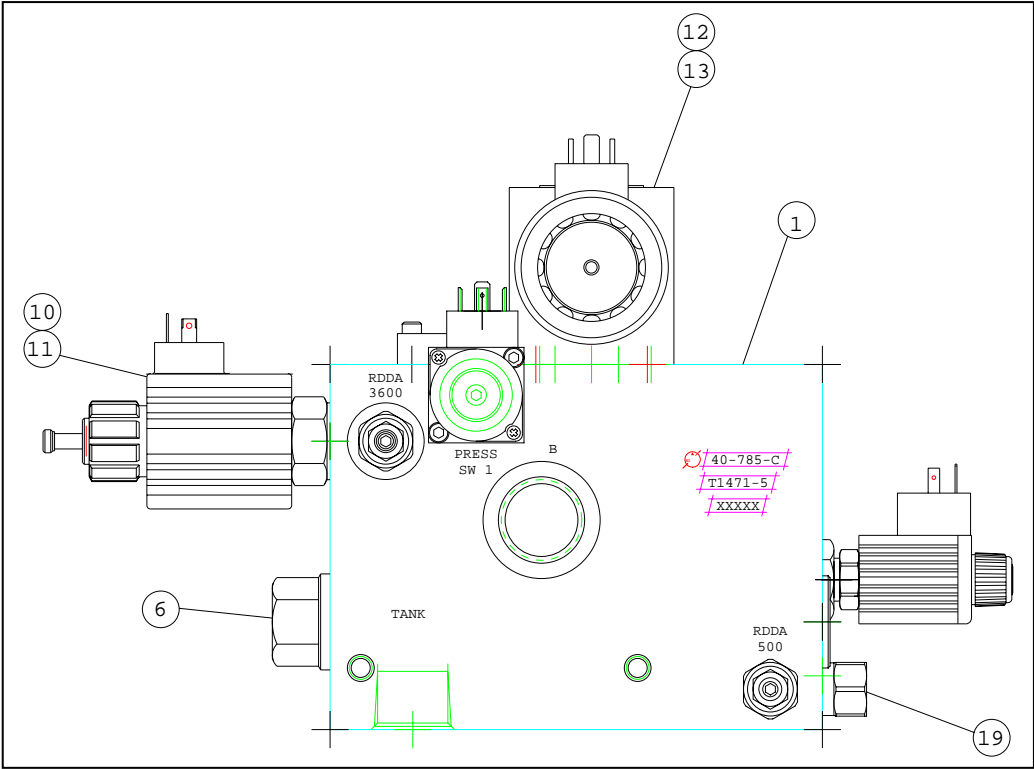


Figure 22: Valve Body Assembly Left Side View

Hydraulic Valve Body Components

Item #	Part Description	Valve Function/Location	Part #	Coil #	Seal #
1.	Valve Pack body		T1644	n/a	n/a
2.	Relief Valve	Main Relief	T1645	n/a	T1034
3.	Relief Valve,	PRS Relief	T1646	n/a	T1034
4.	P.O. Check Valve	Ram Check Valve	T0232	n/a	T0869
5.	P.C. Check Valve	Regen Check	T1017	n/a	T0866
6.	Cavity Plug	Tank	T1647	n/a	n/a
7.	Shuttle Valve	Load Sense	T1042	n/a	T0870
8.	Directional Valve, main	Regen Valve	T1396	n/a	n/a
9.	Directional Valve, pilot	Regen Valve	T0240-1	0591541	T1066
10.	Proportional Flow Control Valve N.C.	Speed Control	T0238		T0872
11.	Coil for above if ordered separately			T0239	n/a
12.	Directional Valve	Cylinder	T1648	0531583	T0873
14.	Orifice Plug w/.031 orifice		T1054	n/a	n/a
16.	Plug, 4ea. trans. Switch & gage		T1649	n/a	n/a
17.	Cover plate Kit w/ hardware and seals	Non-Tonnage Config.	T1064	n/a	n/a
17.	Valve, Proportional Pressure Control	Tonnage Valve	T1060	T1043	n/a
18.	Hex Plug	Cooler	T1650	n/a	n/a
19.	Check Valve	PRS Check	T1070	n/a	T1079
20.	Fitting –6 JIC/-4 SAE ORB Connector 6400-6-4		n/a	n/a	n/a
21.	Fitting –6 SAE ORB/-6 JIC Swivel adapter 6402-6-6		n/a	n/a	n/a
22.	Pressure Switch		n/a	n/a	n/a
23.	Orifice Plug. .062 dia Orifice	Tonnage control	T2435	n/a	n/a
	Pump		T2851	n/a	n/a

Hydraulic Power Unit Hoses & Fittings

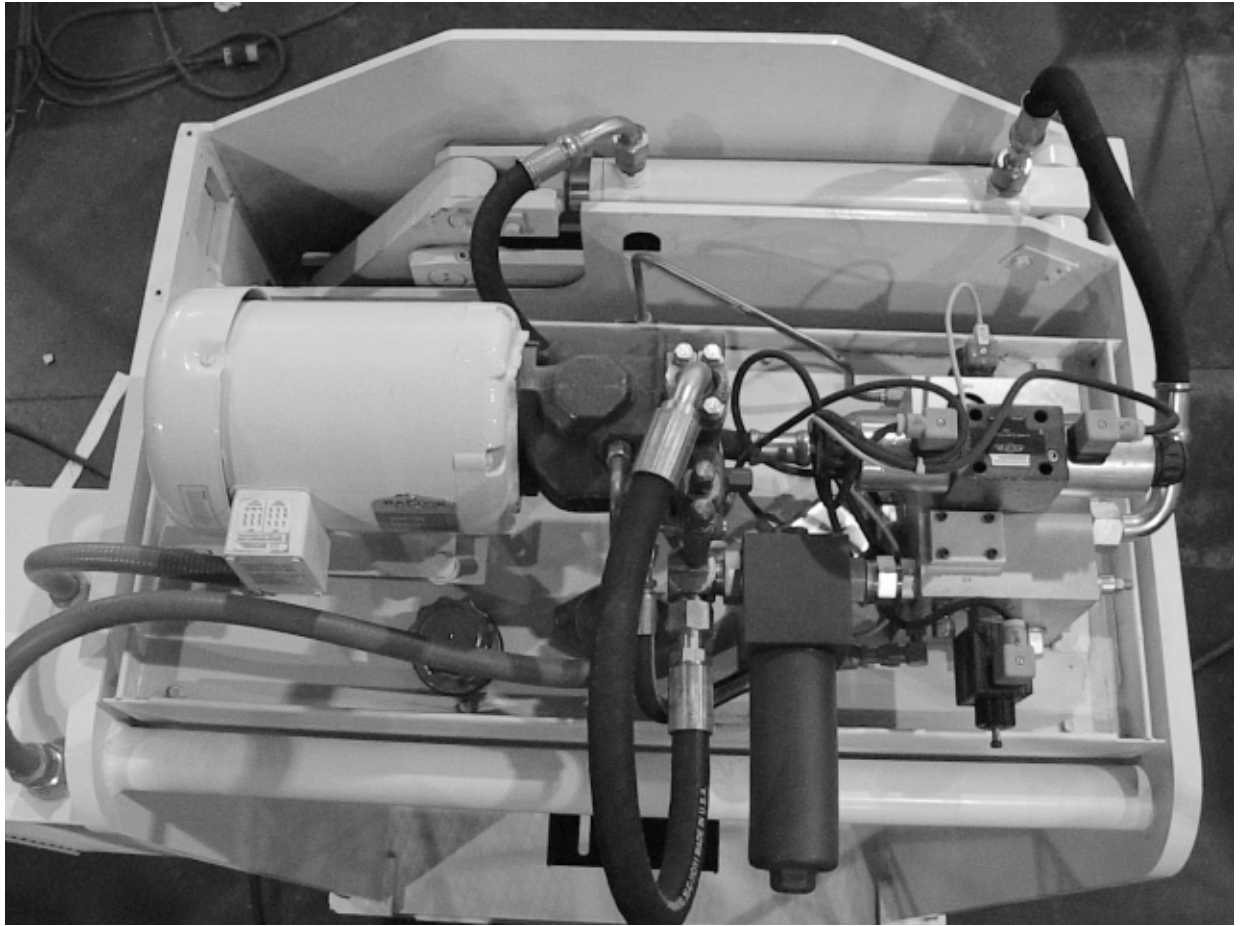


Figure 23: Hydraulic Power Unit Hoses & Fittings

Item / Function	Qty	Description	Part #
Motor 3 HP	1	208 VAC	T2850
		220/440 VAC	T2850
		575 VAC	T3046
		230 VAC 1 PH	T3047
Pump	1	Hydraulic Pump Var. Disp.	T2851
Filter Assembly	1	Hydraulic Filter Assembly w/o fittings	0591550
Filter Element	1	Replacement Filter Element	0591551
Cylinder	1	Hydraulic cylinder 25-4	T2815
Tank Drain	1	Ball Valve - 1/2 Pipe	T0058
	1	Pipe Nipple - 1/2 x 1	T0128
	1	Pipe Plug - 1/2 NPT	531516
	1	Black Pipe Street E11	0551515
Pump Suction	1	Suction Tube - 1 OD	T2917
	1	4-Bolt Flange Kit - 1" tube	T1636
	1	Flange Seal - 1 1/4 Tube	T0950
Pump Pressure	1	Hose Assy - NO. 12	T2919
& Filter	1	4-Bolt Flange Kit - 3/4	T1725
	1	90 Elbow - 16ORB/12ORFS	T1726
	1	Swivel Nut Adapter - 16ORB/JIC	T1727
	1	Straight Adapter - 12ORb/16JIC	T1087

Gauge Port	1	Straight Adapter-4ORB/6JIC	0541517
	1	304-C-6 cap	0541076
Pump Load Sense	1	Hose Assy - 1/4	T0949
	2	90 Elbow - 4ORB/6ORFS	T1729
Pump Case Drain	1	Straight Adapter - 6 ORB/ JIC	571506
	1	Tube Assy - Case Drain	T2916
	1	Flange Seal - 3/8 Tube	T2941
Valve to Cyl Ext	1	Straight Adapter	T0805
	1	Hose Assy	T2921
	1	Straight Adapter, 12ORB x 16ORF	T1731
Valve to Cyl Ret	1	Straight Adapter	T1731
	1	Hose Assy - 3/4 OFS	T2920
	1	Straight Adapter - 10ORB/12ORFS	T1800
PRS System	2	Tee - 6JIC	531520
	1	Tube Assy - Vlv to Tee	T2918
	2	Tube Assy - Tee to Cyl	T3156
	2	90 Elbow -6JIC/4ORB	531523
	2	Breather Plug	T1330
	1	Straight Adapter, 6ORB/JIC FEM	T1652
	2	Cylinder, PRS	T1314
	2	Mounting Bracket, PRS Cylinder Lower	T2853
	2	Mounting Bracket, PRS Cylinder Upper	T1338-2
Return Pipe	1	1 x 10 LG Black Pipe Nipple	T1733

Ram Slides

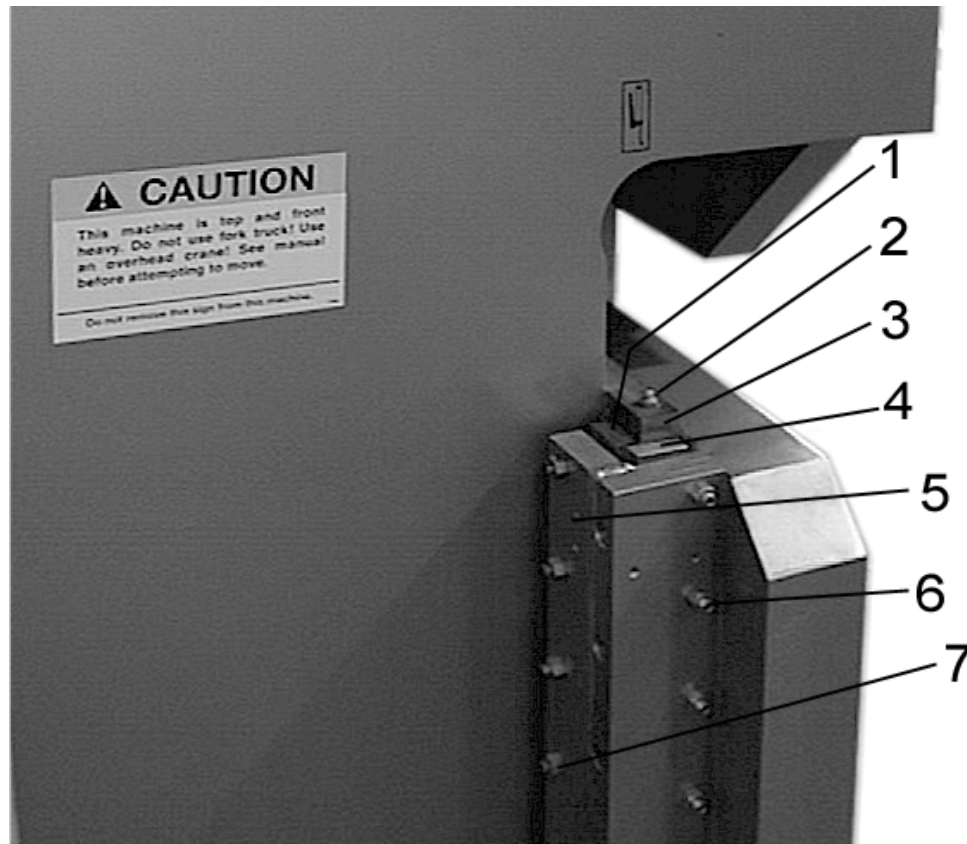


Figure 24: Gib Parts

Item	Description	Part #	Qty
1	Side/Rear ram slide bearing assembly	T0095	4
2	Grease zerk 1/3" pipe	0531360	2
3	Ram slide right (Opposite End)	T0486	1
	Ram side left	T0487	1
4	Slide mounting bracket	T0018	
5	3/8 x 3-1/2 SHCS	T0076	6
	3/8 High collar lock washer	T0291	6
6	Rear /side adjustment screw 3/8 x 2 SSS	T0125	16
7	Rear /side adjustment nut	0581198	16

Oil Filter Assembly

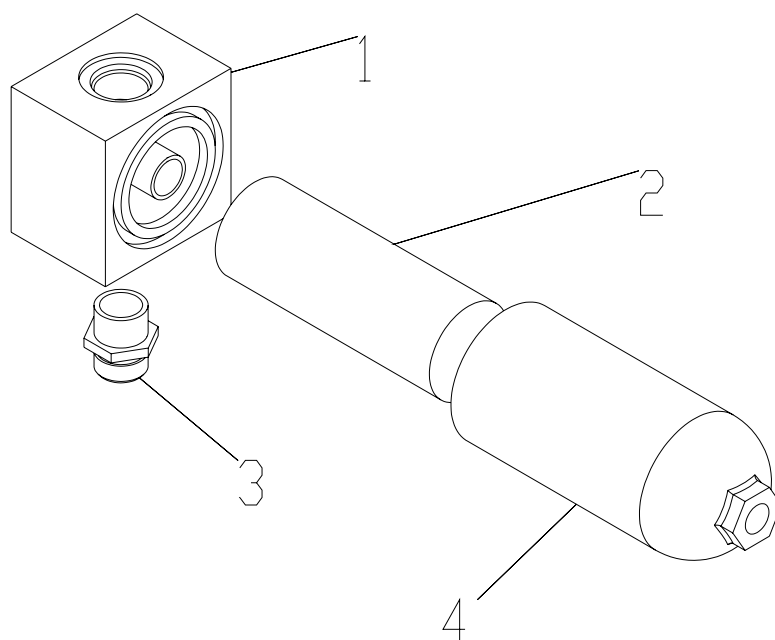


Figure 25: Oil Filter Assembly Exploded View - 0591550

Item	Description	Part #	Qty.
1&4	Filter Body & Bowl	0591550	1
2	Filter Element	0591551	1
3	Fitting – inlet	T0913	1

Wedge Assembly

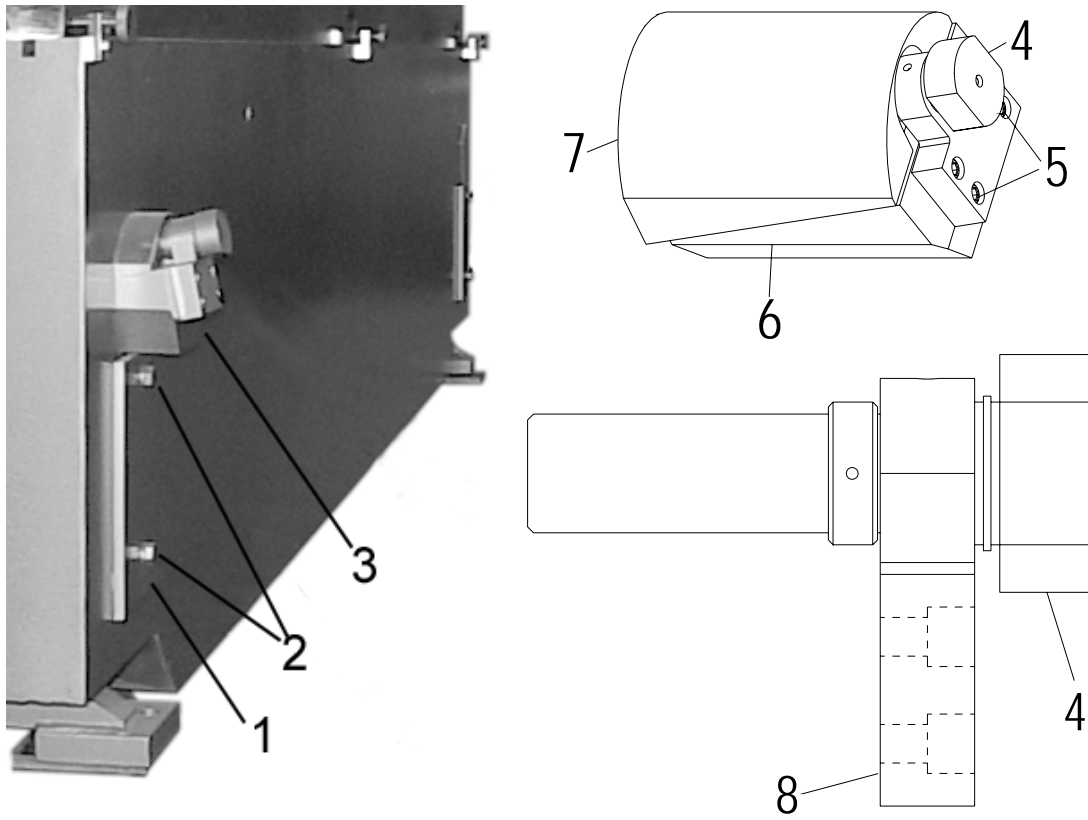


Figure 26: Wedge Assembly T2730

Item	Description	Qty.	Part #
1	Key plate	2	T2945
2	5/8 x 2 SHCS	4	
	5/8 LW	4	
4	Wedge adjustment bolt assembly Item 4	1	T2881
5	SHCS	4	
6 & 3	Wedge bottom half	1	T2876
7	Wedge top half	1	T2884
8	Wedge Bottom Plate	1	T2878

Die Rail Centering Screw Assembly (optional)

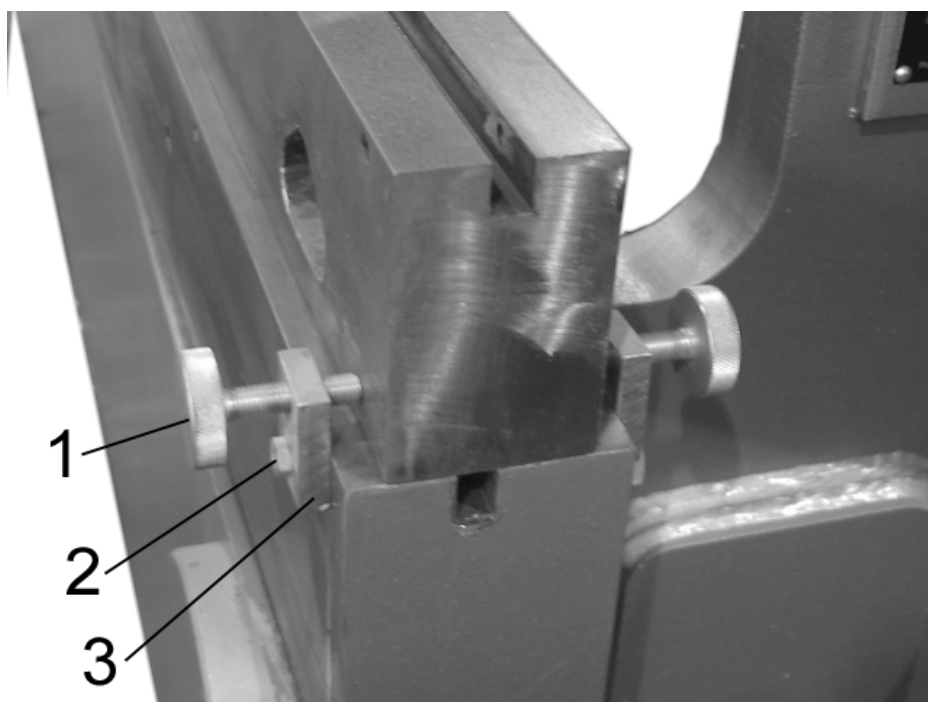


Figure 27: Die Rail Centering Screw Assembly

Figure-Item	Description	Qty.	Part #
1	Die Rail Adjusting Hand Screw	6	T0056
2	3/8"-16 x 1-1/2" HHCS	6	T0186
3	Die Rail Adjusting Block	6	T9200

Punch Clamp Assembly

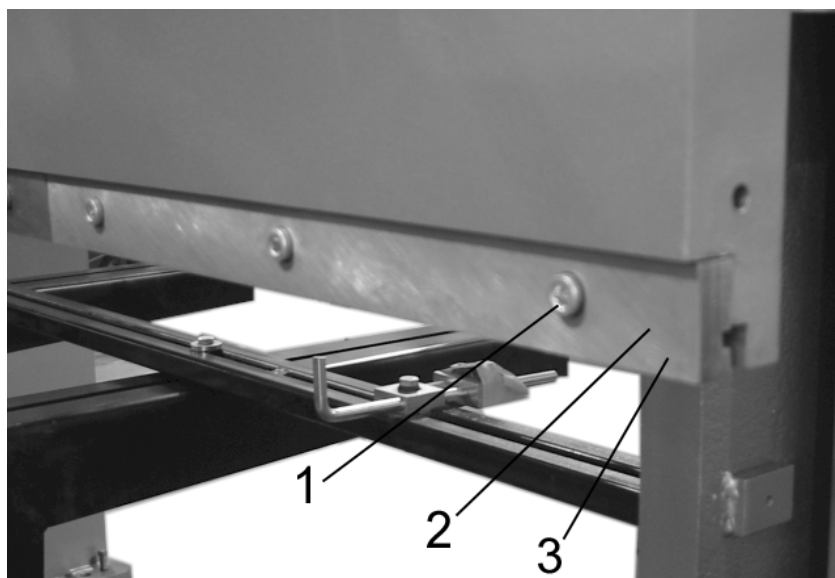


Figure 28: Punch Clamp Assembly

Figure – Item	Description	Qty	Part #
1	½-13 x 1-1/4" Socket Head Cap Screws	9	T1602
2	Punch Clamp Spring	6	T0050
3	Punch Clamp	3	T2319-1

Backstop Assembly (optional)

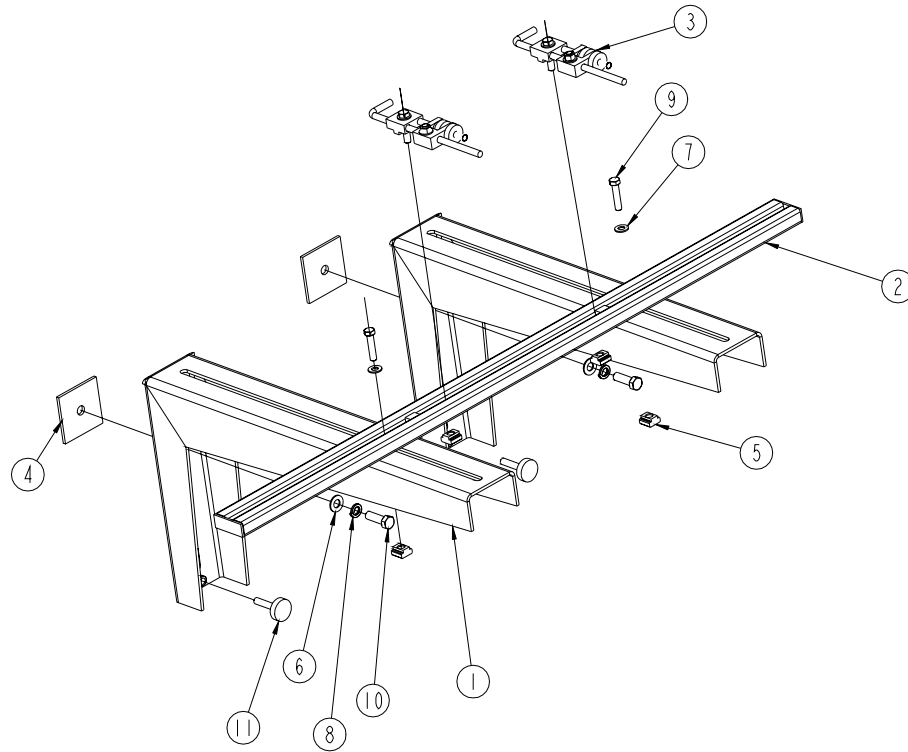


Figure 29: Back Gauge Assembly – T1658

Figure - Item	Description	Qty	Part #
1	Back Gauge Mount Bracket Weldment	1	T37311
2	Back Stop Bar Weldment	1	T16591
3	Back Stop Finger Assy	2	T14-995
4	Spacer Plate, Back Gauge	2	T9655
5	T-Nut 5/8, 1/2-13 Thrd, 1 Long	2	T1031
6	Washer 5/8	2	0531311
7	Washer 1/2	2	T0057
8	LW 5/8	2	0531304
9	HHCS 1/2 x 2-1/4	2	0581108
10	HHCS 5/8 x 2	2	T0080
11	Die Rail Hand Adjusting Screw	2	T0056

Back Stop Finger Assembly (Optional)

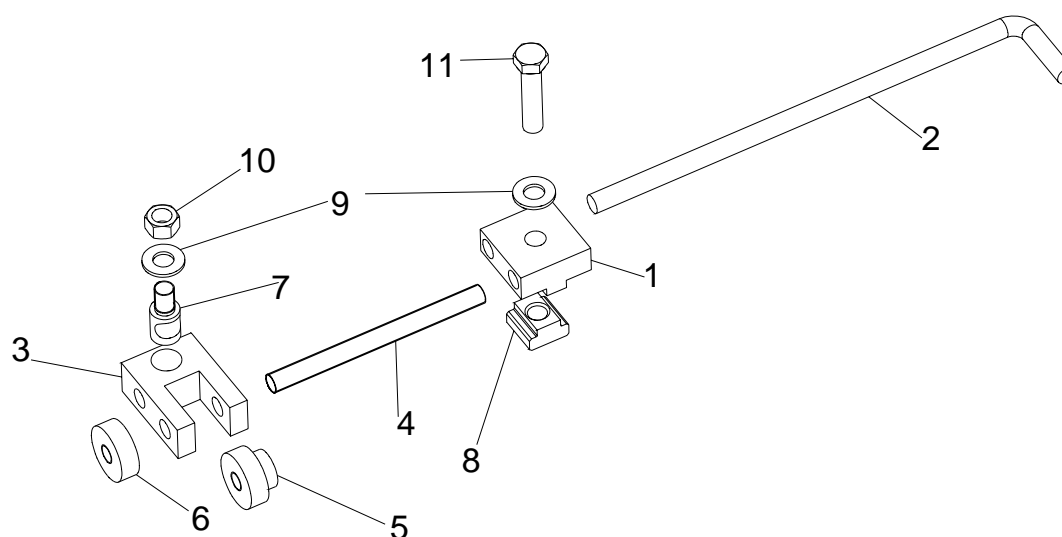


Figure 30: Back Stop Finger Assembly – T14-995

Figure - Item	Description	Qty	Part #
1	Mounting Block Top	1	T9048
2	Back Stop Finger Bar	1	T3801
3	Adjusting Block	1	T0084
4	Adjusting Bar	1	T0086
5	Adjusting Nut	1	T0087
6	Locking Nut	1	T0088
7	Locking Bolt	1	T0085
8	T-Nut 5/8	1	0531723
9	Flat Washer 1/2"	2	T0057
10	Hex Nut 1/2"	1	0581195
11	HHCS 1/2 x 2-1/4	1	0581108

Die Rail (Optional)

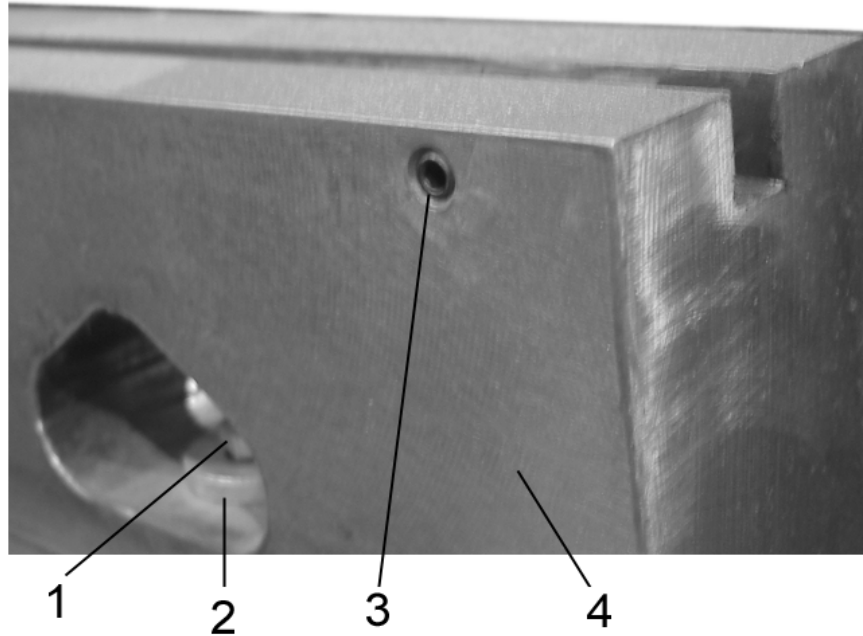


Figure 31: Die Rail

Figure-Item	Description	Qty.	Part #
1	1/2" x 2 3/4" HHCS	3	0581105
2	1/2" Hard Flat Washer	3	T0057
3	3/8"-16 x 3/4" SSS Cup Point	26	0531056
4	Die Rail 35-6	1	T2841

Glossary

AC Motor	<i>An electric motor designed to operate using AC power.</i>
Accuracy	<i>The deviation of a value from its theoretical value after the device has been correctly calibrated.</i>
Air Bending	<i>The forming of sheet or plate using a "V" die where the desired angle is achieved before the work piece is compressed between the upper and lower tools.</i>
Ambient Condition	<i>The surrounding atmosphere and environment.</i>
ANSI	<i>American National Standards Institute. A national, nonprofit organization. Its principle function is to establish industry-wide standards that are put in place through a process of consensus among qualified participants.</i>
Backlash	<i>Mechanical clearances that exists or may develop through wear between a driven component and a drive source.</i>
Ball Bushing/Linear Bearing	<i>A tubular shaped ball bearing assembly designed for linear movement on a shaft.</i>
Bed	<i>The stationary member of the press brake that supports the tooling and other associated equipment.</i>
Bolster (bolster plate)	<i>The plate(s) attached to the bed or ram having means for attaching die components.</i>
Bottom Bending	<i>The forming of sheet or plate using "V" die where the desired angle is completed after the work piece is compressed between the upper and lower tools. Typically requires 3-5 times the tonnage for air bending.</i>
C Frame	<i>Vertical side frame of the press brake.</i>
Circuit Breaker	<i>A device used with electrical equipment to provide overload protection.</i>
Closed Height	<i>See shut height.</i>

Coining	<i>A method of bottom bending where additional force is applied during the bend to make the work piece conform to the shape of the upper and lower tools. Typically uses "V" dies with opening of 6 times the material thickness and requires 5-7 the tonnage for air bending.</i>
Coupling (Shaft)	<i>A mechanical device used to join a motor output shaft to a machine part, typically a roller.</i>
Cycle	<i>A series of events or operations that recur regularly and usually lead back to the start.</i>
Cylinder	<i>A piston-type actuator.</i>
DC Power Supply	<i>An electrical device used to convert incoming AC power to regulated DC power.</i>
Die (s)	<i>The tooling used in a press brake for forming metal.</i>
Die Holder	<i>The plate or rail to which the lower portion of the die member is attached.</i>
Die rail	<i>See die holder.</i>
Die Shimming	<i>Method to raise or fill a void between two surfaces. Typically used to compensate for machine deflection or worn tooling.</i>
Die Space	<i>The space between the bed and ram.</i>
Dies, Bending	<i>Dies used in press brakes to perform bending and forming operations on a variety of work pieces.</i>
Electrical Spike	<i>An unpredictable and infrequent momentary high electrical voltage which can harm electrical/electronic devices.</i>
Encoder	<i>A device typically electromechanical, that translates motion into electrical pulses. See also Resolver, Tachometer, or Transducer.</i>
Feedback	<i>The return to an input of a part of the output of a machine or control system, or process.</i>
Fuse	<i>Electrical overload protection device.</i>
Fuse Block	<i>A holder for a fuse or fuses including wire termination.</i>
Gauge	<i>A stop against which the material or workpiece is placed to locate it within the point of operation.</i>

Gibs	<i>The machine members used for guiding the ram.</i>
Grease zerk	<i>Fitting designed to accept grease for lubricating components.</i>
Hydraulics	<i>The branch of mechanics, which uses controlled hydraulic oil flow, and pressure to provide force to an actuator.</i>
Inertia	<i>A property of matter by which it stays at rest or in uniform motion in the same straight line unless acted on by an external force.</i>
Lifting lugs	<i>Steel plates with large holes that are attached to the press brake to assist in lifting the machine.</i>
Limit Switch	<i>Typically, an electrical device that provides position information to a control system.</i>
Low Voltage	<i>A voltage reading that is lower than the required or expected voltage.</i>
Machinist Square Level	<i>Machinists level having four sides. Permits' measuring vertical surfaces as well as horizontal surfaces.</i>
Motor Starter	<i>A relay capable of withstanding inductive load generated when starting an electric motor (AC or DC).</i>
Open Loop	<i>A control concept in which feedback is not used to modify the characteristics of the output.</i>
Operator Interface	<i>Typically, a control or control panel provided for an operator to modify or monitor system variables.</i>
Photo Sensor	<i>An electronic sensor that uses light wavelengths to detect the position or presence of an object.</i>
Point of Operation	<i>The location in the press brake where the material or a workpiece is positioned and work is performed.</i>
Pressure Reducer	<i>Typically, a hydraulic component that senses secondary pressure to maintain that output pressure regardless of the incoming pressure.</i>

Pressure Relief	<i>Typically, a hydraulic component that uses a spring to hold an orifice closed until system pressure overcomes the spring and allows flow to the reservoir.</i>
Proximity Sensor	<i>An electrical device capable of detecting the presence of an object.</i>
PSI	<i>Acronym. Available Force expressed in Pounds per Square Inch</i>
Punch	<i>The male part of the tool (die).</i>
Pushbutton	<i>A small button or knob actuated by pushing, provided for operator control, electrical, pneumatic, or mechanical.</i>
Ram	<i>The linear moving press brake member configured to carry a portion of the tooling.</i>
Relay	<i>An electromechanical device for remote or automatic control that is actuated in variation of conditions of an electrical circuit and that operates other devices in an electrical circuit.</i>
Repeatability	<i>The closeness of agreement among multiple measurements of an output, for the same value of the measured signal under the same operating conditions, approaching from the same direction for full range traverses.</i>
Reset	<i>To restart or arm a control or safety system.</i>
RPM	<i>Acronym. Rotational speed expressed as Revolutions per Minute.</i>
Safeguarding	<i>A method for protection of personnel from hazards using guards, safety devices, or safe work procedures.</i>
Selector Switch	<i>A small button or knob actuated by turning, provided for operator control, electrical, pneumatic, or mechanical.</i>
Service (Safety) Disconnect	<i>Typically, a large mechanical switch that is provided to completely remove incoming power for the purpose of storage or service of a machine.</i>
Setup	<i>The process of adjusting the press brake and the installation and adjustment of work holding devices or tooling and appropriate safeguarding to ensure proper and safe operation of the press brake.</i>

Shield (foil or braided)	<i>Typically, a metallic encasement surrounding wiring or components to avoid interference from RF signals.</i>
Shut Height	<i>The distance from the bed to the ram when the ram is at the bottom of its stroke (in the closed position).</i>
Solenoid Valve	<i>Typically, a pneumatic or hydraulic valve actuated by an electromagnetic coil.</i>
Throat	<i>An opening or recess in the ram (housing) to permit the positioning of material or workpieces.</i>
Tool (Die)	<i>The cutting or shaping component used in a machine.</i>
Transducer	<i>A device typically electromechanical, that translates motion into electrical pulses.</i>
Transformer	<i>An electrical device that employs the principle of mutual induction to convert variations of current in a primary circuit into variations of voltage and current in a secondary circuit.</i>
V-Bending	<i>The forming of sheet metal material using a pair of "V" shaped tools that bend the workpiece by applying a three-point load.</i>
Valve	<i>Any of numerous mechanical devices by which the flow of liquid, gas, or loose material in bulk may be started, stopped, or regulated by a moveable part that opens, shuts, or partially obstructs one or more ports or passageways.</i>

This page is intentionally left blank.

Index

A

Anchoring, 10
Anchoring hole locations, 10
Ansi, 9

B

Bed adjusting bolt, 25
Bed leveling adjustment, 25
Bed tilt wedge assembly, 25

C

Cleaning, 11
Connecting the pedestal control, 14

D

Die insertion, 26
Die rail shimming, 28
Die rail shimming example, 28
Dual palm buttons, 21

E

Electrical, 13
E-stop, 20

F

Foot/both/hand selector switch, 20
Footswitch, 21
Foundation, 10
Front bed holding bolt, 25
Fuse size chart, 13

G

Gib clearance adjustment, 30
Gib explanation, 31

H

Hydraulic oil, 14
Hydraulic power unit, 31
Hydraulic pump/motor assembly descriptions, 15
Hydraulic schematic, 37

I

Initial leveling, 10
Installation, 9
Introduction, 7

K

Keyed mode selector switch, 17, 20

L

Level adjusting screws, 10
Leveling screws, 10
Lifting, 9
Lifting lugs, 9

M

Machinist square level, 11
Main control panel, 17, 18
Maintenance procedures, 29
Masonry anchors., 10
Mode, 18

O

Off, 18
Oil filter assembly descriptions, 32, 51
Oil filter replacement, 31
Oil level & temperature sight gauge, 14
Operating mode-off /set /run, 18
Operator control, 17

P

Pads, (mounting), 10
Parts, 39
Pedestal control, 20
Precision leveling, 12
Precision leveling detail, 12
Press brake operation, 23
Prs, 44
Pump case drain tube, 15

R

Ram limit switch assembly, 24
Ram linkage, 39
Ram slide, 12, 49
Ram up, 21
Rear bed holding bolt, 25
Rear ram slide bearing, 49
Repeatability, 25
Rotation arrow, 14
Run, 18
Run 1, 19
Run 2, 19
Run 3, 19
Run mode selector switch, 17

S

Safety, 1
Setting limits for forming, 24
Shim, 11, 13
Side adjustment screw, 49
Side thrust gib adjustment, 30
Sight gauge, 14
Slide mounting bracket, 49

Slow speed limit dog locking screw, 23
Slow speed limit switch, 23
Speed control, 18
Speed control dial, 17
Speed control fuse, 17
Spring open die clamp, 7
Square level, 11
Start pushbutton, 17
Steel pads, 10
Stroke controls, 7

T

Temperature sight gauge, 14
Tonnage control dial, 17
Tonnage requirements, 28
Tool adjustments, 28
Tooling installation, 26
Tooling removal, 27
Tooling installation safety, 3

U

Unpacking, 9

V

Valve body assembly, 40
Variable pressing speed, 7

W

Warning labels, 1
Warranty, 7

Z

Zero reference limit switch, 23

Addendums